

KOROK

**DISPLAY (HMI) BATTERY REPLACEMENT FOR THE
HOT ROCKS**

TABLE OF CONTENTS

Revisions	4
IMPORTANT WARNING.....	4
1 Turn off the oven alimentation	4
2 Accessing the screen	4
3 Open the battery compartment	5
4 Take off the battery	5
5 Replace the battery	6
6 Close the battery compartment	6
7 Close all panel	7

Revisions

Revision	Date	Modifications
0	2022-08-01	Original version
1		

IMPORTANT WARNING


- WARNING! THIS PROCEDURE MUST BE DONE WHILE THE OVEN ALLIMENTATION IS OFF. BE VERY CAREFUL NOT TO HURT YOURSELF OR DAMAGE THE EQUIPMENT!

1 Turn off the oven alimention

Turn off the oven alimention by pushing the button on the side of the oven.


2 Accessing the screen

Take off the closest panel to the screen of the.

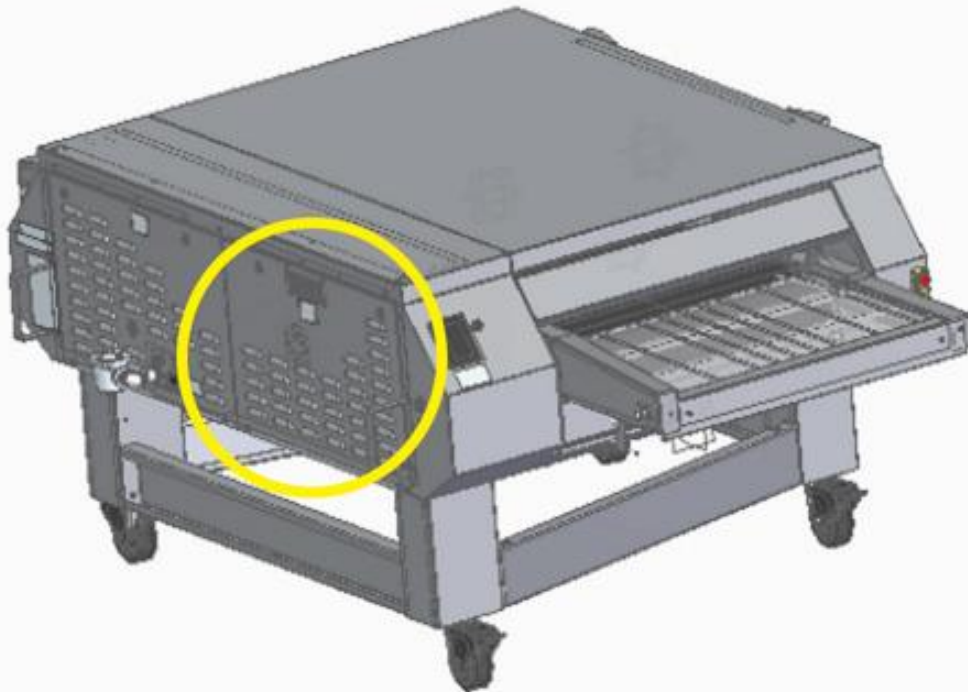


3 Open the battery compartment

Pull the transparent plastic cover from the top handle to open it.

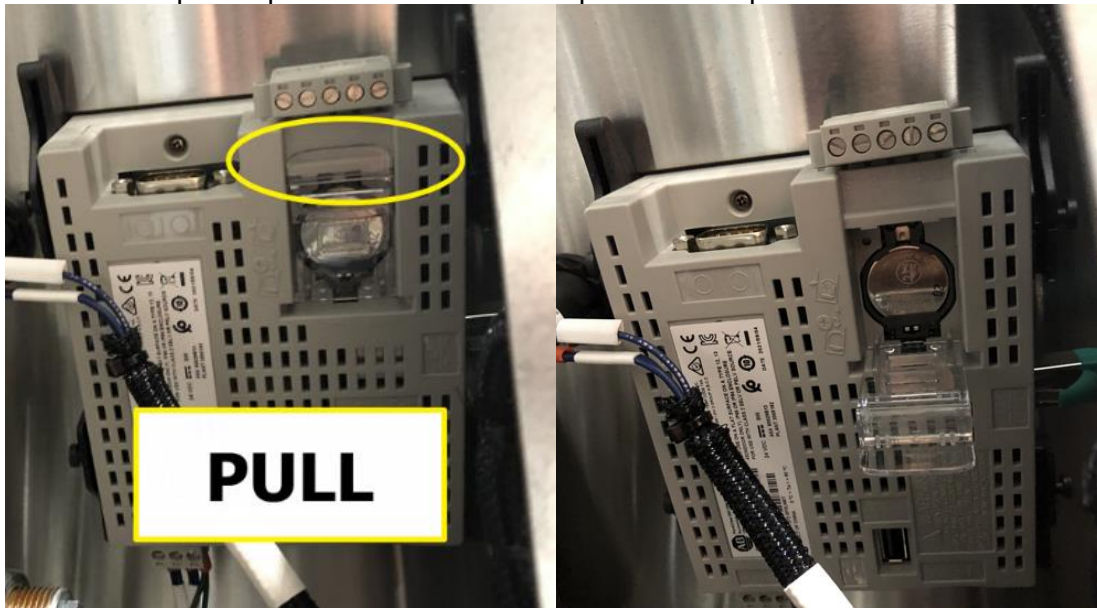

4 Take off the battery


Before taking off the battery notice the way it is insert to put it back the same way. Use a little flat screw driver to use it as a lever to take out the battery. Insert the screwdriver in the hole on the top of the battery and take it out.

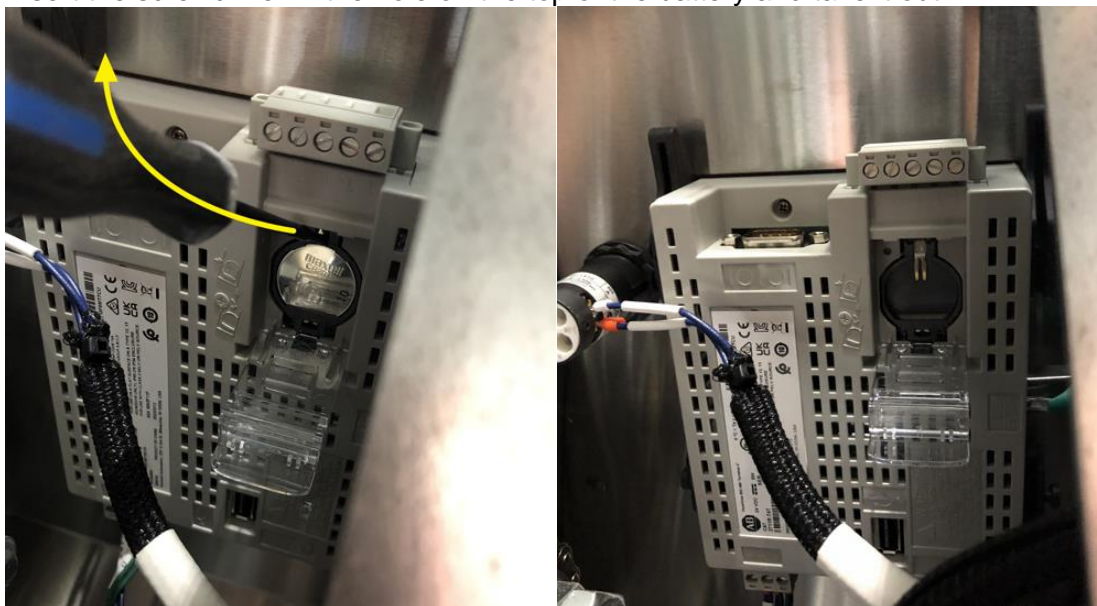

5 Replace the battery


The battery model is a CR2032.

To insert the battery start to insert the bottom and finish by pushing the top.

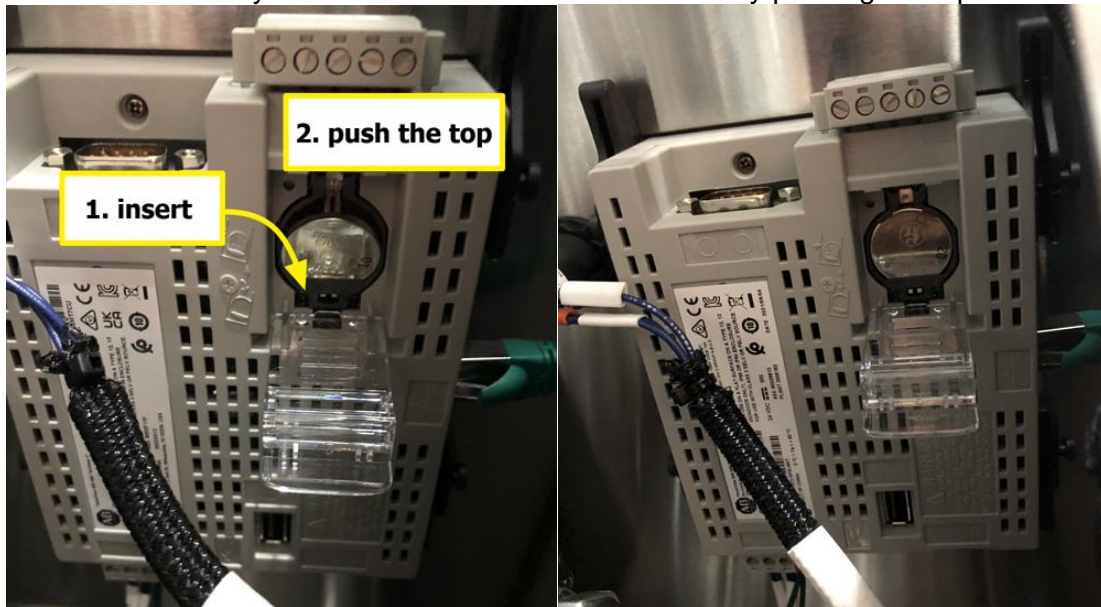

6 Close the battery compartment

Push the transparent plastic cover from the top handle to close it.

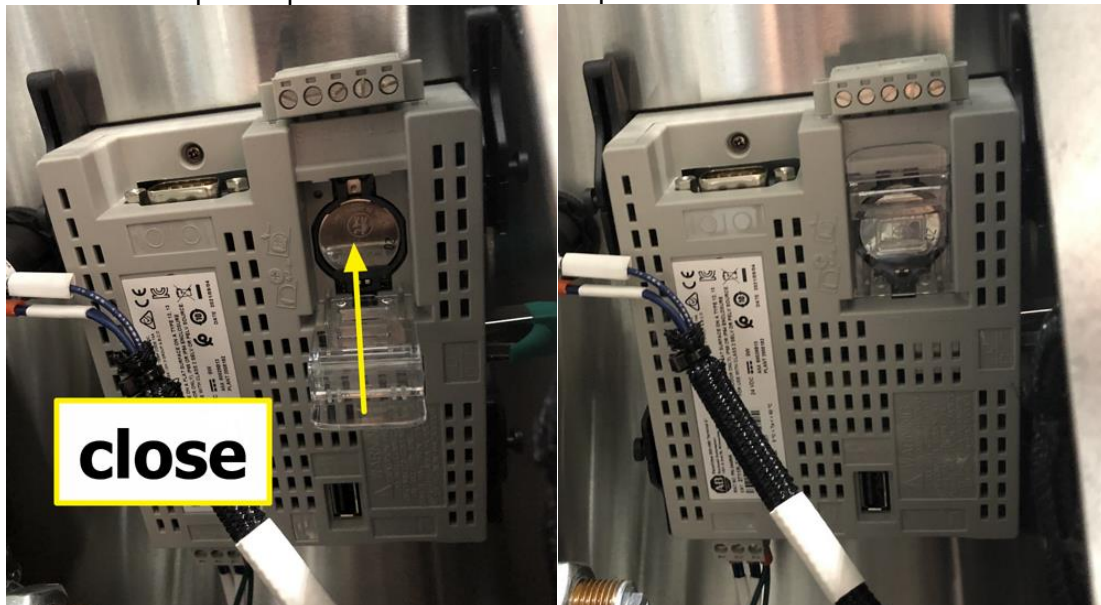

7 Close all panel

Reinstall all the panel that were remove for the operation.

2555, Alfred Nobel, Drummondville
(Québec) Canada J2A 0L5
T : 819 395-5151 / 855 395-5252
F : 819 395-5343

Follow-us

