

**KOROK**

**PLC BATTERY REPLACEMENT FOR THE HOT  
ROCKS (Gen 2)**



---

# TABLE OF CONTENTS

Revisions .....	4
IMPORTANT WARNING.....	4
<b>1 Turn off the oven alimentation .....</b>	<b>4</b>
<b>2 Accessing the screen .....</b>	<b>4</b>
<b>3 Open the battery compartment .....</b>	<b>Error! Bookmark not defined.</b>
<b>4 Take off the battery .....</b>	<b>5</b>
<b>5 Replace the battery .....</b>	<b>6</b>
<b>6 Close the battery compartment .....</b>	<b>6</b>
<b>7 Close all panel .....</b>	<b>6</b>

## Revisions


Revision	Date	Modifications
0	2022-10-25	Original version
1		

## IMPORTANT WARNING

- WARNING! THIS PROCEDURE MUST BE DONE WHILE THE OVEN ALLIMENTATION IS OFF. BE VERY CAREFUL NOT TO HURT YOURSELF OR DAMAGE THE EQUIPMENT!


### 1 Turn off the oven alimentation

Turn off the oven alimentation by pushing the button on the side of the oven.

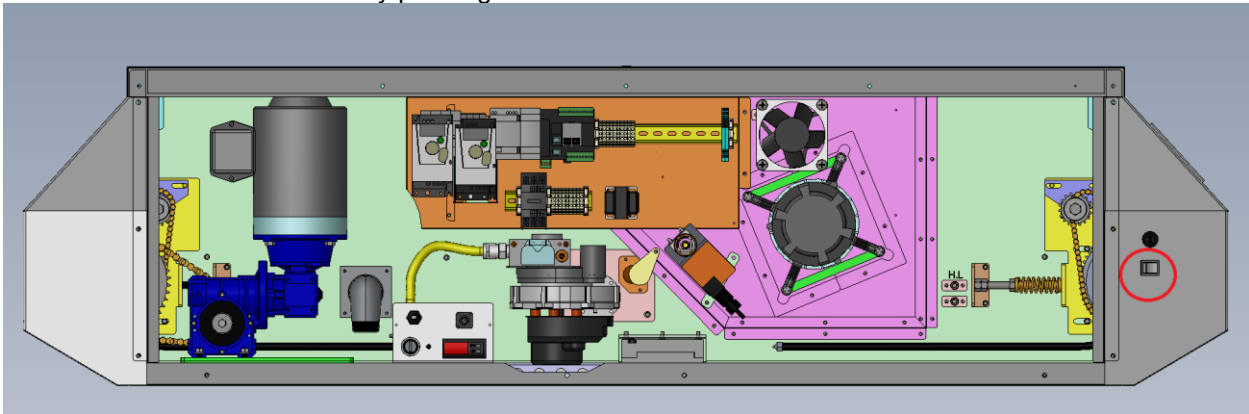


### 2 Accessing the screen

Take off the closest panel to the screen of the.

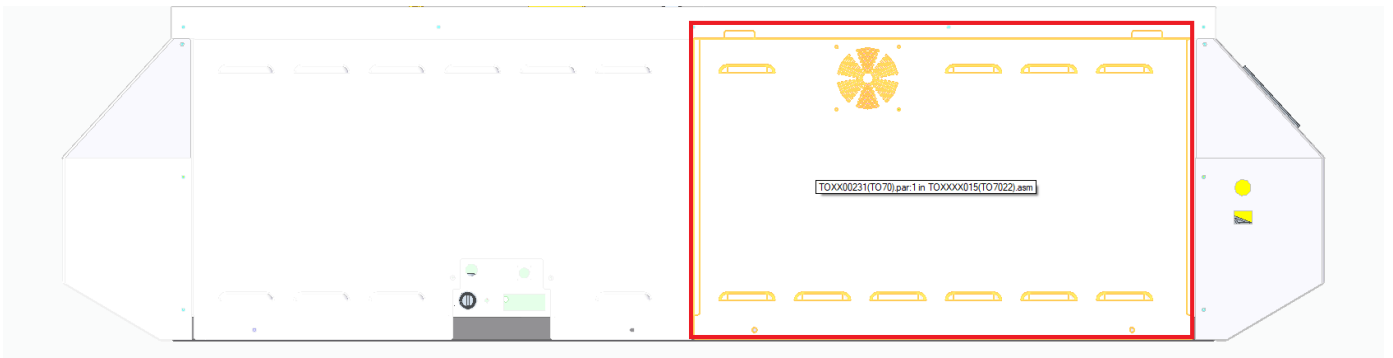

### 3 Find the PLC

The battery compartment can be found on the top right of it

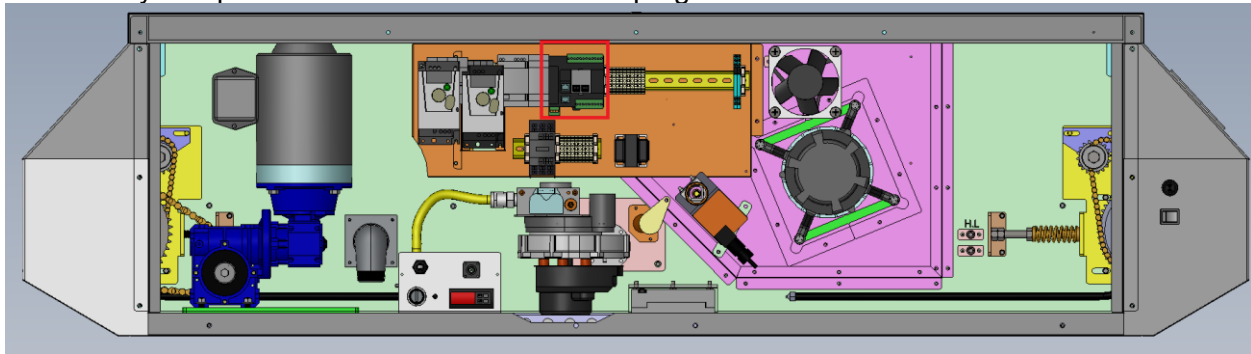

### 4 Take off the battery

Before taking off the battery notice the way it is insert to put it back the same way. Use a little flat screw driver to use it as a lever to lift the "trapdoor" and take out the battery.



## **5 Replace the battery**

The battery model is a BR2032.

Simply insert it in the rail facing the same direction it was in previously

## **6 Close the battery compartment**

Push the rail back down from the top to close it.

## **7 Close all panel**

Reinstall all the panel that were remove for the operation.

2555, Alfred Nobel, Drummondville  
(Québec) Canada J2A 0L5  
T : 819 395-5151 / 855 395-5252  
F : 819 395-5343

Follow-us

