



# HOW TO - CHANGING BURNER PARAMETERS (GEN 2)

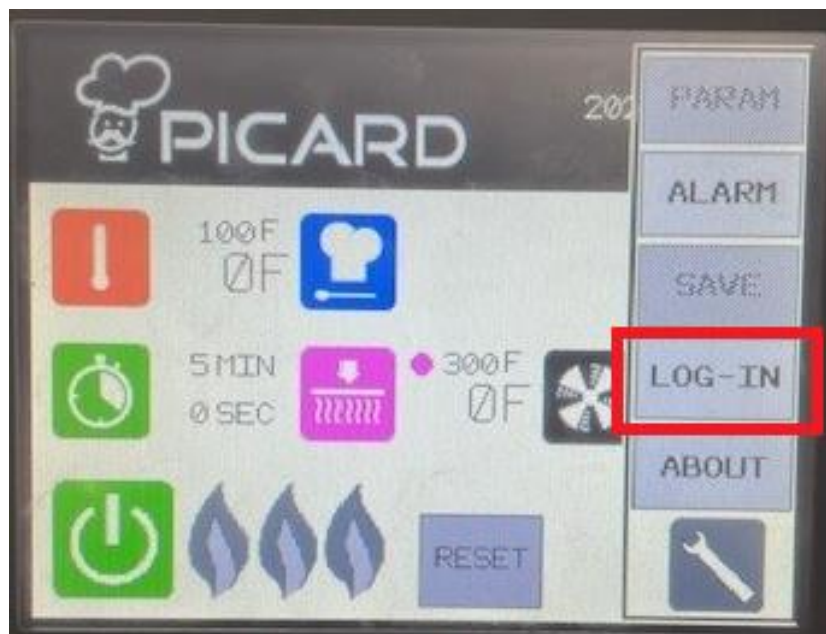

# Step 1

Power up the unit and once the main screen is booted up select the wrench icon.

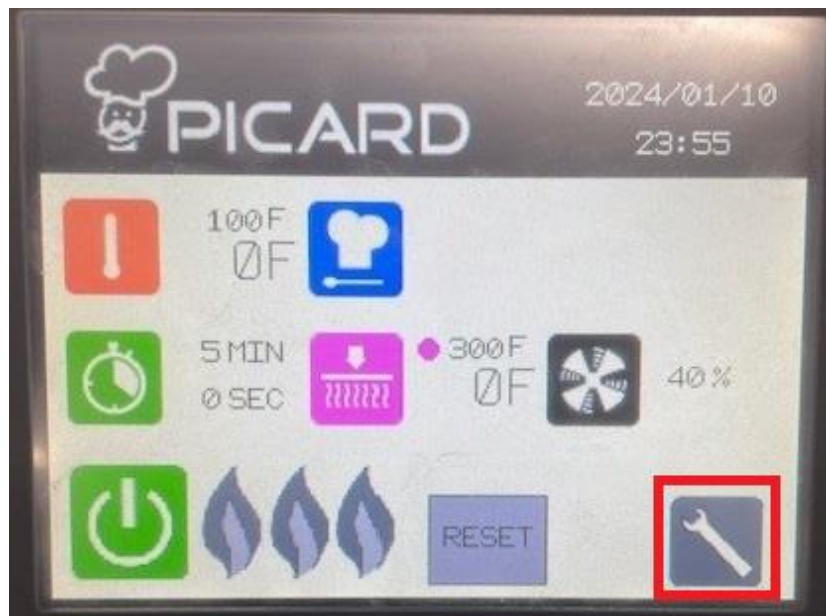

Then select the "Log-In" option

## Step 2

You will now arrive on the login page.

Enter the credentials by pressing on the white cases :




Name = SYSTEM

Password = SYSTEM

Once entered press on the "padlock".

Afterwards the password will disappear but the current user will show as "SYSTEM".

Finally select the house icon to get back to the home page.

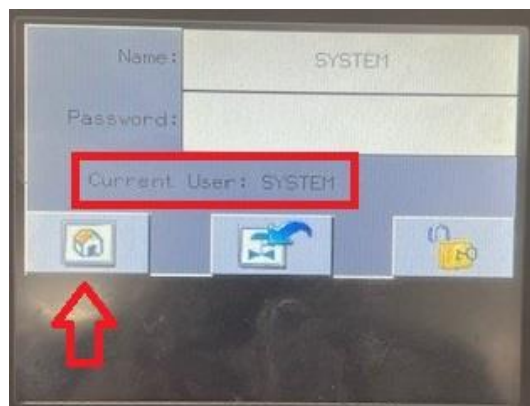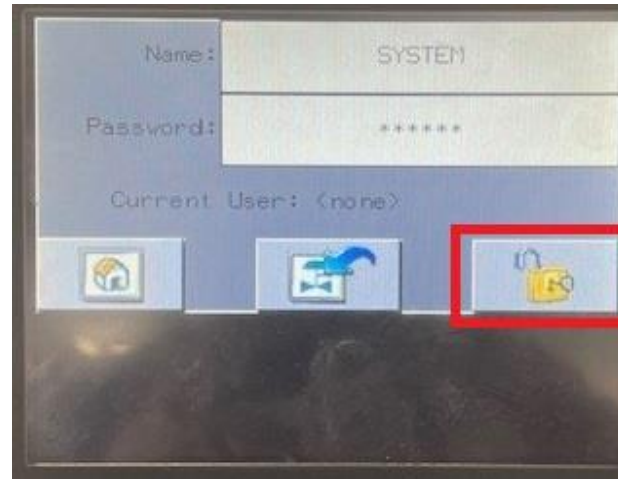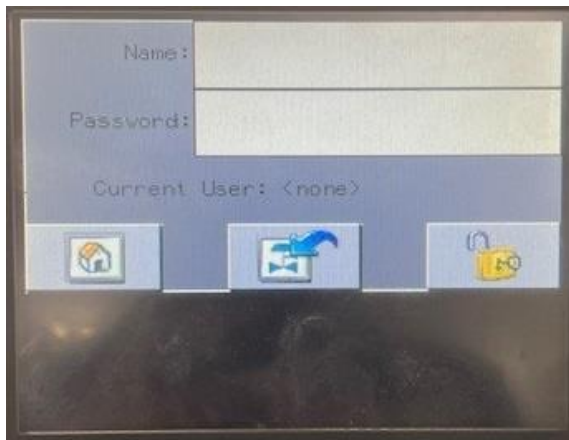

## Step 3



Once back on the home page, select the wrench once again.



The "Param" option will now be available.

Press the button to access the settings.

## Step 4

Once on the parameter's page select the Preheat/Heat cooldown option.



On this page there are 3 settings to change. We recommend changing "low fire" first, then "reduced fire" and finally "max fire".



# Step 5



After selecting any of the 3 burner settings you will have the option to change them. (1.)

Note that each settings have a different minimum and maximum value which cannot be modified. (2&3)

The recommend settings are :

## A) Natural

High fire: 85%  
Reduce fire: 70%  
Low fire: 15%

## B) Propane

High fire: 65%  
Reduce fire: 60%  
Low fire: 15%