


HOW TO - CHANGING BURNER PARAMETERS (GEN 3)



Situational step

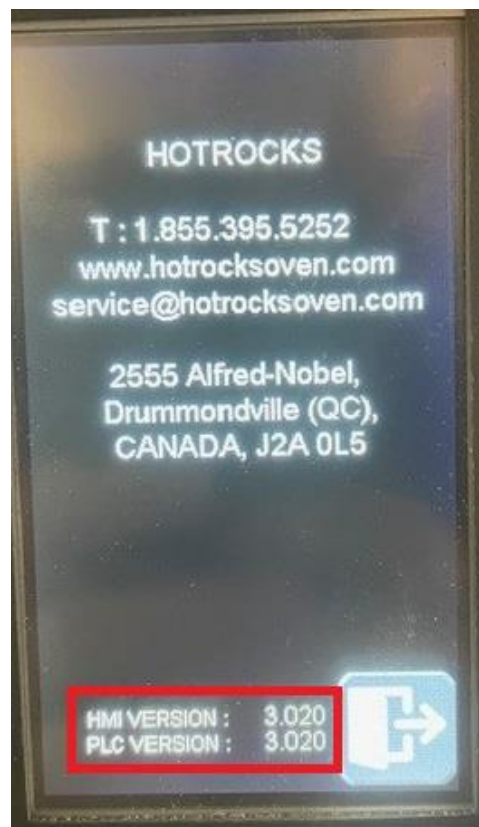

Double check your unit's software version. If you are using 3,020+ you do not need to readjust settings they are optimally adjusted according to the unit's settings.

Step 1

Power up the unit and once the main screen is booted up select the "gears icon".



Then select the "person" icon

1)



2)



3)



Step 2

1) You will now arrive on the user page.

2) Enter the credentials by pressing on the white cases :

User = 2

Password = 911

Once entered press on the "enter« key (arrow).

After pressing "enter" it will not give a confirmation but put you back on the user page.

3) Finally select the "Door icon" to get back to the main page.

Step 3



If the login was a success new icons will be present on the system page.

Select the "Gear icons"

Step 4



Once arrived at the heat setting page press on the arrows pointing right twice.

Step 5



Pressing on either parameters will bring up a number keypad in order to change the settings.

We recommend starting with the low fire %

The recommend settings are :

A) Natural

High fire: 85%

Reduce fire: 70%

Low fire: 15%

B) Propane

High fire: 65%

Reduce fire: 60%

Low fire: 15%