


How to replace HR11-0085-A

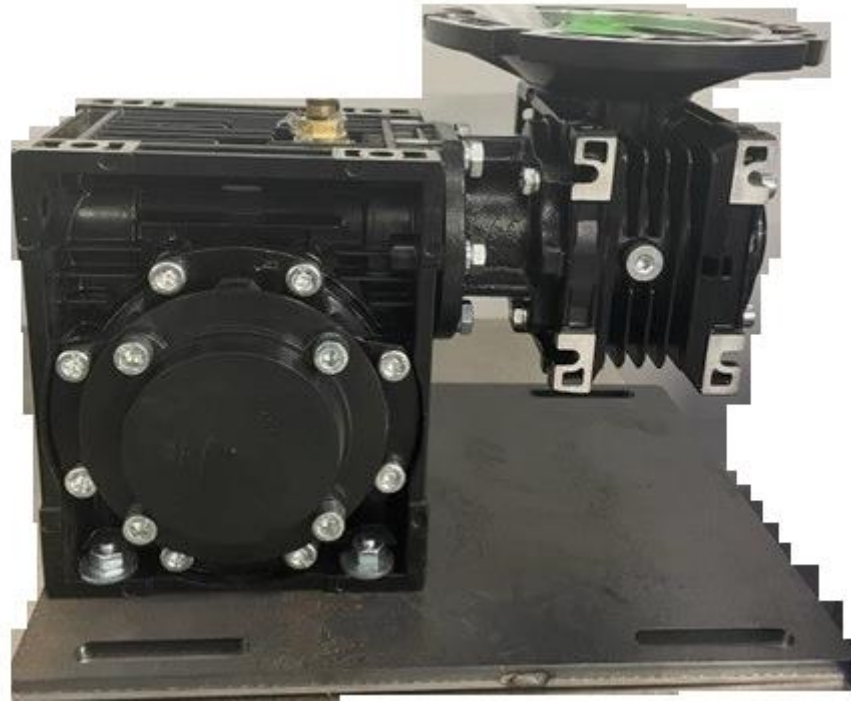

Step 1

Unplug the electrical connection. Make sure that the oven is not powered, also disconnect the gas supply.

Take off the side panels.

You will be able to do so after moving the oven off the wall.

To remove them you have to turn the latches by turning them a quarter of the way counterclockwise or by removing the screws depending on the oven's panel type.




Step 2


Afterwards you will need to disengage the gearbox chain from the main sprocket

A) Unscrew the 4 bolts that hold the plate in place

A)

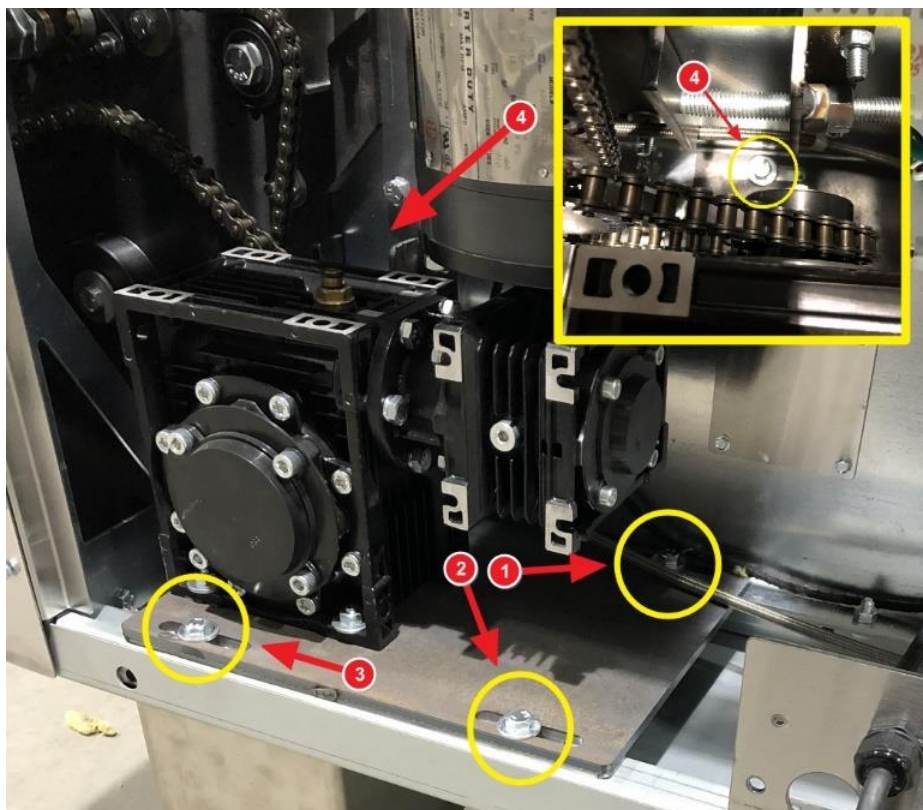


B)

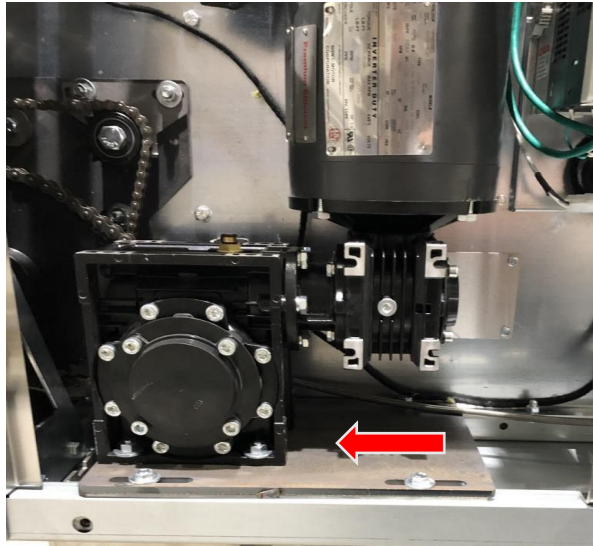

Step 3

B) Push the drive system fully forward

C)

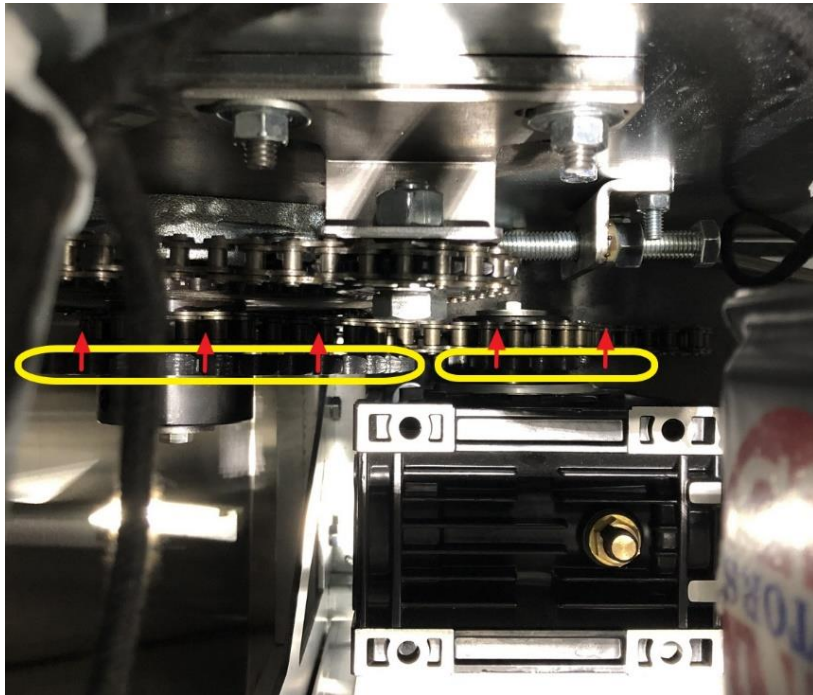

C) Take the chain off of the sprockets

Step 4

After disengaging the chain from the gearbox you will need to remove it from the plate underneath.

To do so there's 4 screws (1/2") that will need to be removed.



Step 5

Once the gearbox is removed from the plate it is time to separate the motor from it.

You must start off by removing the “C” plate by removing the 4 bolts underneath (7/16”).

Then removing the key to unlock the motor’s engagement to the gearbox.

Once the motor is removed you can replace the gearbox with the new one and repeat the step backwards to put the unit back together.

Please note it is easier to set the tension on the assembly using a crowbar.

The recommend tension is such that the chain must be able to move only a maximum of $\frac{1}{4}$ ”

