

# How to replace the blower (HR11-0004-A TO HR11-0009-A)



# Step 1


Unplug the electrical connection. Make sure that the oven is not powered, also disconnect the gas supply.

This is for your safety.

Take off the side panels.


You will be able to do so after moving the oven off the wall.

To remove them you have to turn the latches by turning them a quarter of the way counterclockwise or by removing the screws depending on the oven's panel type.

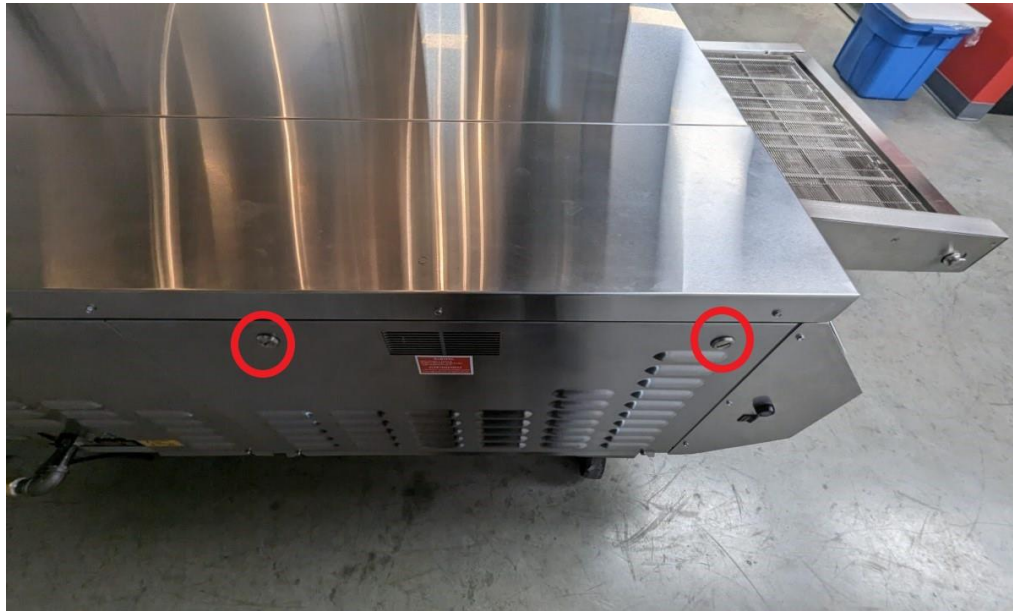

## Step 2

Now that you've taken the side panels off you have to locate the blower.

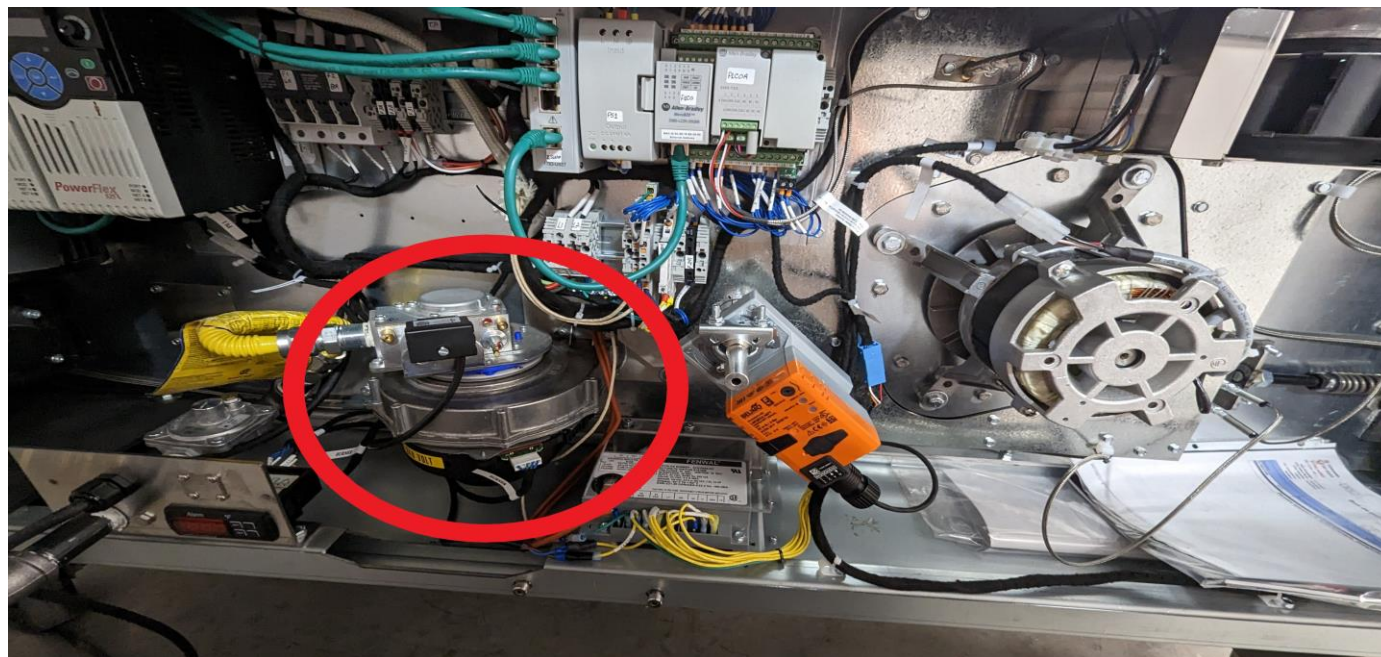




## Step 3

Now that the blower and the rods are unplugged you can locate the 2 nuts that are holding the assembly.

They are located near the wall.

Be sure to store the nuts in a place where you won't lose them.

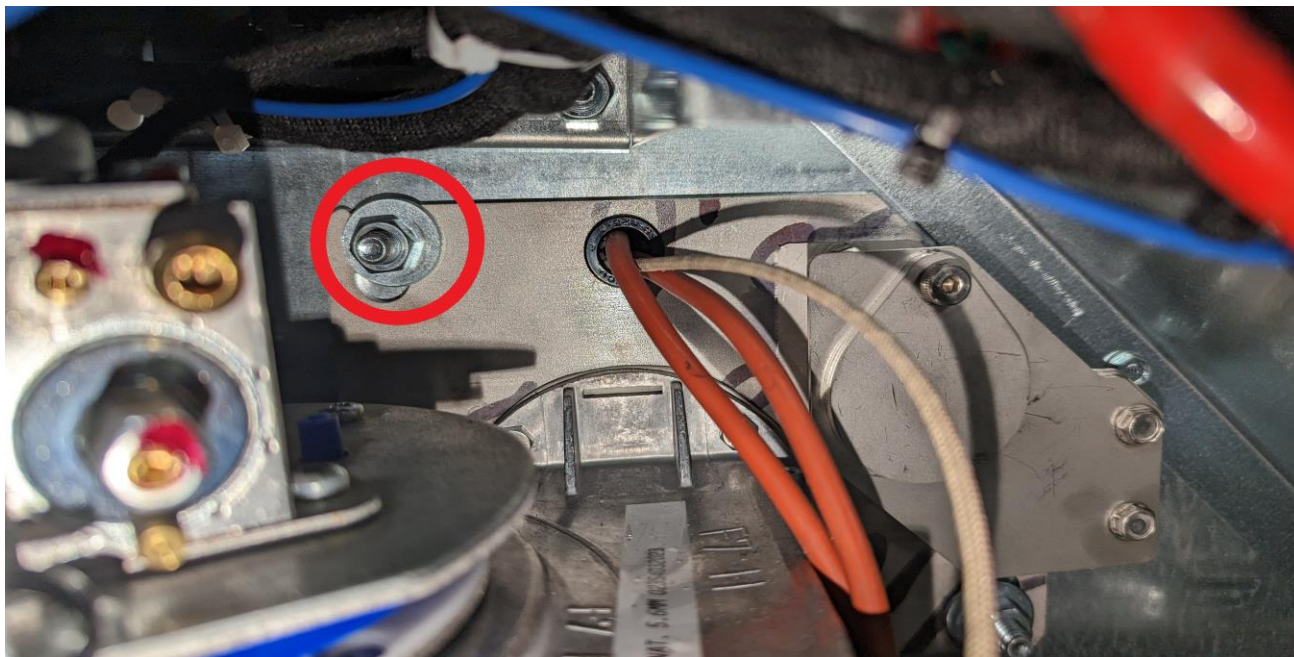

## Step 4

You can pull out the burner until you see the screws holding the burner and the blower together.

Then unscrew the 4 screws and keep them where you won't lose them.



## Step 5

After taking the screws off you can now take off the blower.

Dont forget to replace the gasket.

This is what it looks like, also match the slots together.

When its done you can follow the steps backwards.

