

# How to replace the burner

(HR11-0015-A, HR11-0018-A, HR11-0021-A and HR11-0023-A )



# Step 1

Unplug the electrical connection. Make sure that the oven is not powered, also disconnect the gas supply.

This is for your safety.

Take off the side panels.


You will be able to do so after moving the oven off the wall.

To remove them you have to turn the latches by turning them a quarter of the way counterclockwise or by removing the screws depending on the oven's panel type.



## Step 2

Now that you've taken the side panels off you have to locate the blower.


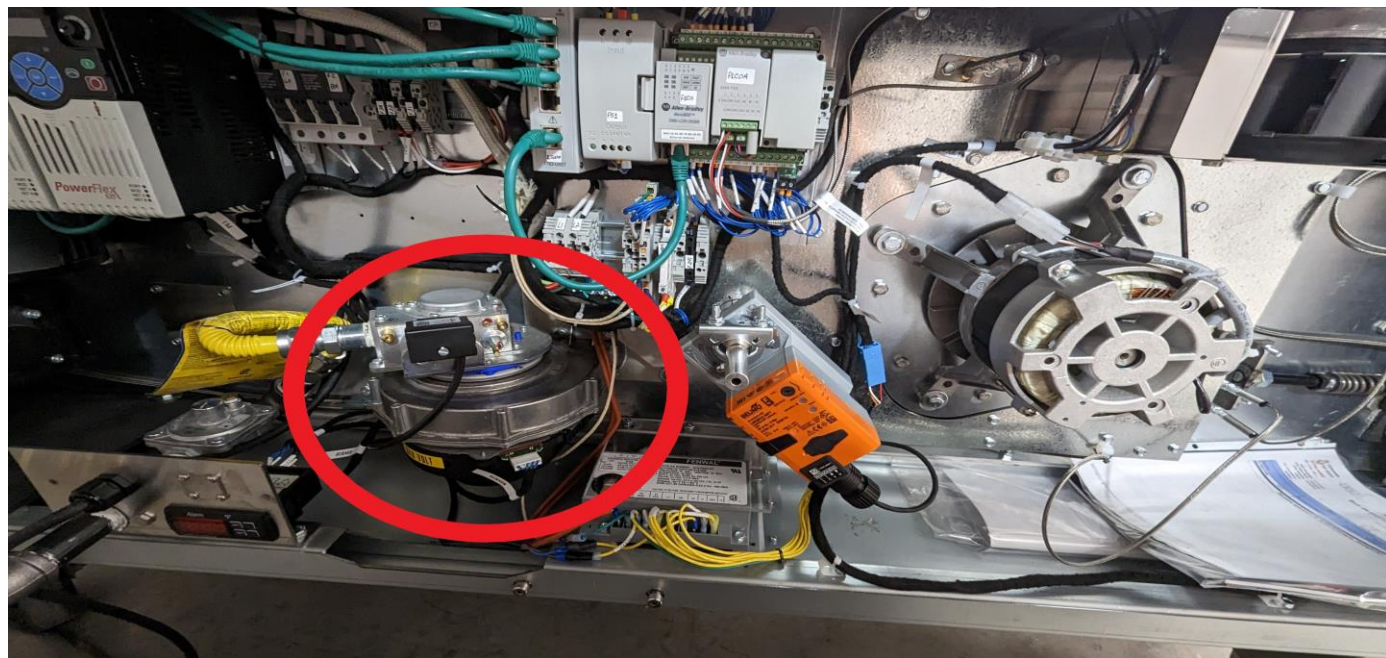


## Step 2.5

Unplug the blower and the ignition rods.

The blower and the ignition rods both have 3 different connections. Be sure to note the wires.

The black plug has to be unscrewed before being taken out.

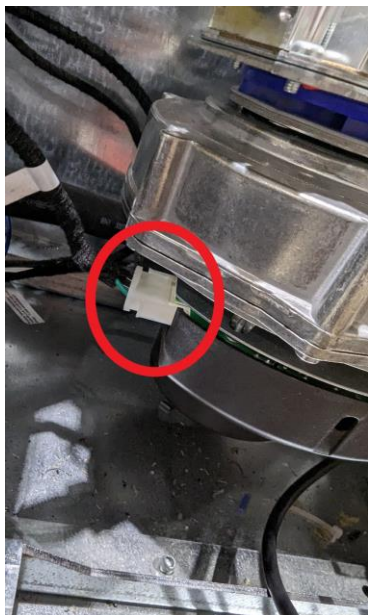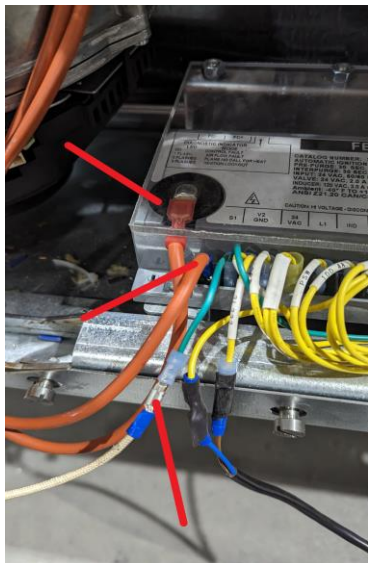


## Step 3

Now that the blower and the rods are unplugged you can locate the 2 nuts that are holding the assembly.

They are located near the wall.

Be sure to store the nuts in a place where you won't lose them.

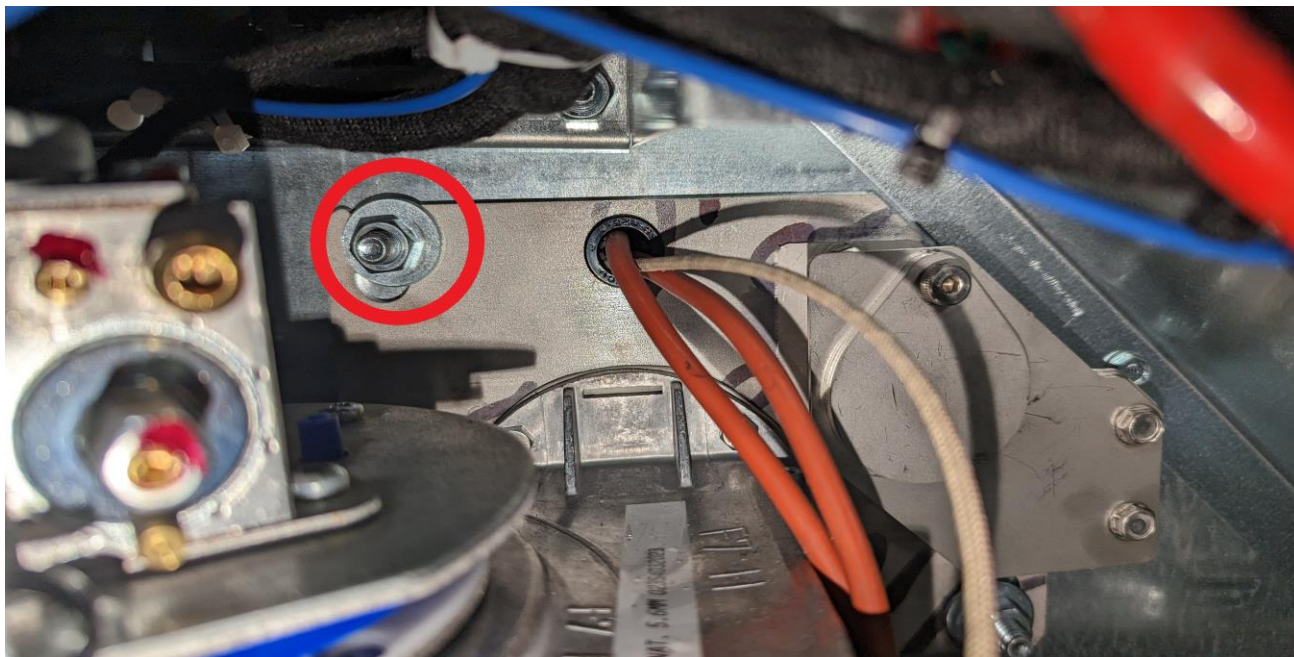

## Step 4

Completely pull out the assembly. Once pulled out there will be 4 screws that holds the burner and the blower together.

Then unscrew the 4 screws and keep them where you wont lose them.



## Step 5

After taking the screws off you can now remove the blower and replace the burner with the .

Dont forget to switch the gasket. This is what it looks like, you also have to match the slots together.

You can now do the steps backwards.

