





**STICKERS YOU WILL FIND ON YOUR OVEN:**

**DANGER-WARNING**

Never put your hands inside the oven while the stone conveyor is moving.

**ATTENTION BRÛLANT**

**CAUTION HOT**

**WARNING**

**DISCONNECT POWER  
SUPPLY BEFORE SERVICING  
AND MAINTENANCE.**

**AVERTISSEMENT**

**COUPER L'ALIMENTATION AVANT  
L'ENTRETIEN ET LE DÉPANNAGE.**

**IMPORTANT**

**COOK ONLY PIZZAS AND / OR BREADS DIRECTLY UPON THE BAKING STONE.  
ALWAYS COOK ALL OTHER FOODSTUFF IN PROPER COOKING RECEPTACLES.**

**CUIRE SEULEMENT LES PIZZAS OU LES PAINS DIRECTEMENT SUR LA SOLE.  
TOUTES AUTRES NOURRITURES DOIVENT ÊTRE CUITES DANS UN RÉCIPIENT APPROPRIÉ**



## **WARNINGS**

### **IF A GAS ODOR IS DETECTED**

- **Close immediately the manual gas control valve.**
- **Do not try to turn on any appliances.**
- **Do not touch any electrical switch; do not use any phones in your building.**
- **Immediately contact your gas supplier using a neighbor's phone. Follow the gas supplier's instructions.**
- **If you cannot reach your gas supplier, contact the fire department.**

### **FOR YOUR SAFETY:**

**Do not store or use gasoline or other flammable vapours or liquids in the vicinity of this oven or any other appliance.**

### **WARNING**

**Improper installation, adjustment, alteration, service or maintenance may result in property damage, injury or even death. Read the installation operating guidelines and maintenance instructions thoroughly before installing or servicing this equipment.**

**THIS MANUAL MUST BE KEPT FOR FUTURE REFERENCE.  
STORE IT IN A PLACE EASILY ACCESSIBLE.**



MODEL / MODÈLE:		GAS / GAZ:	
SERIAL / SÉRIE:		MAN. PRESSURE/PRESSION D'ÉCHAP.:	
ELECTRICITY /ÉLECTRICITÉ:		LINE PRESSURE/ PRESSION D'ENTRÉE	
AMPS / AMPÈRE:		NOZZEL / ORIFICE :	
HP / CV:		INPUT / DÉBIT (BTU/H)	



PICARD OVENS • FOUR PICARD  
 QUÉBEC, CANADA  
 WWW.PICARDOVENS.COM

## TUNNEL OVEN / FOUR TUNNEL

### CLEARANCES TO COMBUSTIBLES / DÉGAGEMENTS AUX COMBUSTIBLES

COMBUSTIBLE AND NON-COMBUSTIBLE MATERIAL	MATÉRIEL COMBUSTIBLE ET NON-COMBUSTIBLE
2"	2"

- INTENDED FOR OTHER THAN HOUSEHOLD USE.
- FOR INSTALLATION UNDER A VENTILATION HOOD ONLY.
- SUITABLE FOR INSTALLATION ON COMBUSTIBLE FLOOR.
- POUR UTILISATION AUTRE QUE DOMESTIQUE.
- POUR INSTALLATION SOUS UNE HOTTE DE VENTILATION SEULEMENT.
- PEUT ÊTRE INSTALLÉ SUR UN PLANCHER COMBUSTIBLE.

CERTIFIED TO / CERTIFIÉ À  
 CSA Std. 1.8-2006(R2012)

CONFORM TO / CONFORME À  
 ANSI Std. Z83. 11-2006(R2012)  
 ANSI/NSF Std. 4-2009



**Intertek**  
 9700551

GAS FOOD SERVICE EQUIPMENT  
 ÉQUIPEMENT DE RESTAURATION À GAZ



**Intertek**

MADE IN CANADA / FAIT AU CANADA

F053-0097 REV 00





## **CONGRATULATIONS!**

YOU ARE NOW THE OWNER OF A NEW PICARD TUNNEL OVEN!

Regarding your business concern, we are convinced that you will enjoy your equipment and, on behalf of the company, we do appreciate your choice.

Your new tunnel oven was built using the latest technology and was designed with production proven reliability. A team of experienced technicians completed the manufacturing of the approved equipment committed to excellence.

### **MANUFACTURING IMPROVEMENTS AND FEATURES**

- Specially designed for all-purpose baking.
- Designed and built with care and precision for trouble-free running.
- Easy to operate and clean.
- Because most of the manufacturing can now be done in our factory, the result is a better end product.
- Application of different kinds of hi-tech on electronics and materials.

**FOR YOUR SAFETY, THIS OVEN CONFORMS TO  
CSA Std. 1.8-2006 (R2012)  
ANSI Std. Z83.11-2006 (2012)  
ANSI/NSF STD. 4-2009**





## **TABLE OF CONTENTS**

<b>MANUAL INSTALLATION</b>	<b>13</b>
• Distance to keep from flammable product	13
• Power and pressure	13
• Cautions	14
• Operating, installing and technical service	15
• Flue connections	16
• External dimensions	18
<b>MANUAL INSTRUCTIONS</b>	<b>19</b>
• Starting up and shutting off your oven	19
• Touchscreen control panel	20
<b>MAINTENANCE</b>	<b>28</b>
• Maintenance chart	28
<b>PRE-DRYING</b>	<b>30</b>
<b>ELECTRICAL DIAGRAM</b>	<b>31</b>
<b>WARRANTY</b>	<b>35</b>
<b>APPENDIX</b>	<b>37</b>



**MINIMAL DISTANCE REQUIRED BETWEEN THE  
OVEN AND FLAMMABLE MATERIAL**

Combustible and non combustible materials: 2 inch clearance.


**GAS CAPACITY AND PRESSURE**

MODEL	ORIFICE	TYPE OF GAS	CAPACITY BTU	LINE PRESSURE	MANIFOLD PRESSURE
HR-70-22	5.6MM	Propane	80,000	5-14'' WATER COLUMN	0'' WATER COLUMN
		Natural			
HR-70-33		Propane	120,000		
		Natural			
HR-93-22		Propane	160,000		
		Natural			
HR-93-33	Propane	200,000			
	Natural				

**NOTE**

Picard gas units are manufactured only to be used with the type of gas specified on the unit rating plate.

The installation must be in accordance with local codes, or in the absence of local codes, to the ANSI Z223.1 / NFPA 54 (National Fuel Gas Code) or CAN/CSA-B149.1 (Natural and or propane gas installation code)

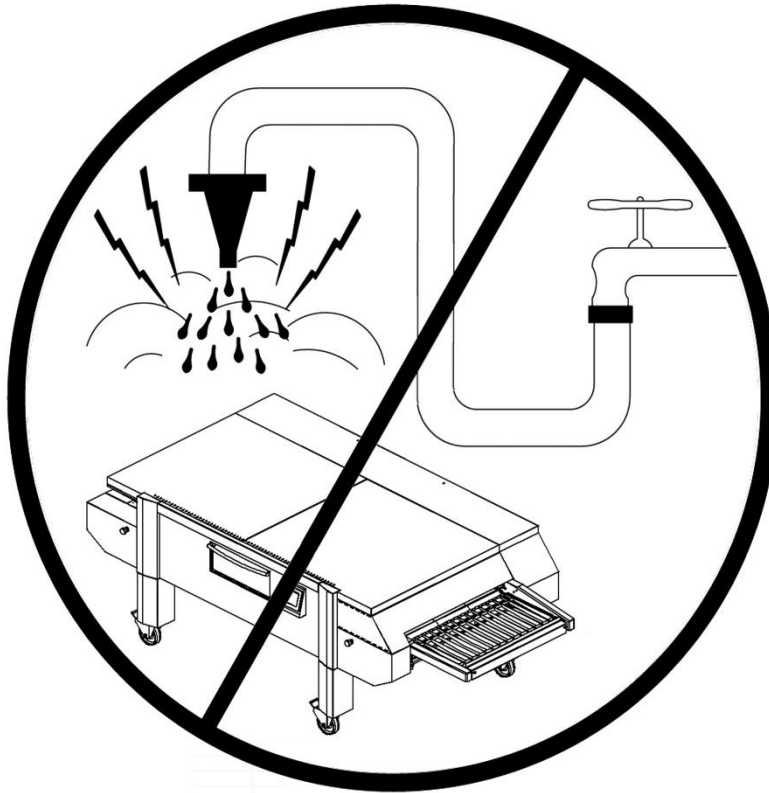

**WARNING!**

***DO NOT SPRAY LIQUIDS OR VAPORS ON OR NEAR ELECTRICAL EQUIPMENT . DO NOT USE THIS APPLIANCE IF ANY OF ITS PARTS HAVE BEEN UNDER WATER . CONTACT IMMEDIATELY A QUALIFIED SERVICE TECHNICIAN TO INSPECT THE APPLIANCE AND TO REPLACE ANY PARTS OF THE CONTROL SYSTEM AND GAS CONTROL WHICH HAVE BEEN UNDER WATER.***

## **OPERATING, INSTALLING AND TECHNICAL SERVICE :**

### **WARNING!**

Operational information on this equipment has been prepared to be used by a qualified and/or authorized operating personnel. All installation and/or service on this equipment is to be performed by qualified, certified, licensed and/or authorized installation or service technician. *Service may be obtained by contacting the factory service department, factory representative or local service agency.*

### **DEFINITIONS :**

#### **- QUALIFIED AND/OR AUTHORIZED GAS TECHNICIAN:**

Qualified or authorized operating personnel are those who have carefully read the information in this manual and are familiar with the equipment's functions or have had previous experience operating the type of equipment covered in this manual.

#### **- QUALIFIED INSTALLATION PERSONNEL:**

Qualified installation personnel can be represented by: an individual, a firm, a corporation or a company which, either in person or through a representative, is involved and is responsible for:

1. The installation of gas piping from the outlet side of the gas meter or service regulator when the meter is not provided, and the connection and installation of the gas appliance. The qualified installation technician must be experienced in such work, be familiar with all required precautions, and have complied with all requirements of state or local authorities having jurisdiction. Reference in Canada: Canadian Standard CAN/CSA-B149.1 and Z223.1 / NFPA 54 (Natural and/or propane gas installation code)
2. The installation of electrical wiring from the electric meter, main control box or service outlet to the electric appliance. The qualified installation technician must be experienced in such work, be familiar with all required precautions, and have complied with all requirements of state or local authorities having jurisdiction.
3. The appliance, when installed, must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical code ANSI/NFPA 70, or the Canadian Electrical code, CSAC22.1 No 109 or conform to UL STD 197.

## **PICARD TUNNEL FLUE CONNECTIONS**

For installation under a ventilation hood only.

Do not have fans blowing directly on the oven and, wherever possible, avoid opening windows next to the oven sides or back or using wall type fans, which create crosscurrents of air within the room.

### **GAS ENTRY CONNECTION**

The tunnel oven on casters must be connected to the gas line by a flexible tubing. A safety chain must join the tunnel oven to the wall to prevent it from moving. The length of the safety chain must refrain the flexible tubing from tightening.

### **WARNING**

The Picard oven must be interlocked with the venting hood, using a pressure or a vacuum switch (refer to the electrical diagram on page 25).

### **CAUTIONS**

The areas surrounding the front, rear and sides of the unit should be kept clear so that the necessary air flow, which is required for proper combustion and operation, isn't blocked. Unit should also be positioned for easy maintenance.

### **IMPORTANT**


This oven is to be installed in an area with adequate air supply and (adequate) clearance for air openings into the combustion chamber of the unit.

### **IMPORTANT**

All exhaust systems are required to have make-up air system that replaces 100% of the exhaust air. Windows, doors, or other openings into the establishment cannot be used for the purposes of providing make-up air. A separate duct providing air into the building is required.



## TYPE OF FLUE CONNECTION

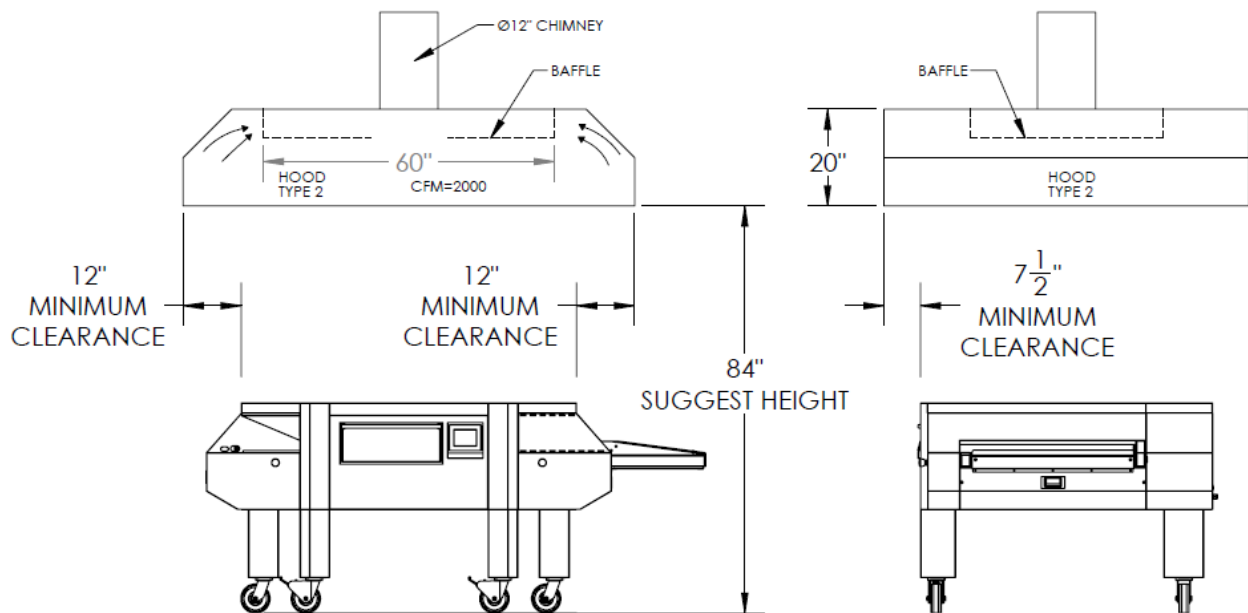

Or you could also use two small hoods. One at the entry and the other at the exit.

### IMPORTANT

The drawing above is used as an example to illustrate how the oven should be properly connected.


### GAS ENTRY CONNECTION

The tunnel oven on casters must be connected to the gas line by a flexible tubing. A safety chain must join the tunnel oven to the wall to prevent it from moving. The length of the safety chain must refrain the flexible tubing from tightening.

### WARNING

The Picard oven must be interlocked with the venting hood, using a pressure or a vacuum switch (refer to the electrical diagram on page 25).

## PICARD TUNNEL OVEN EXTERNAL DIMENSIONS

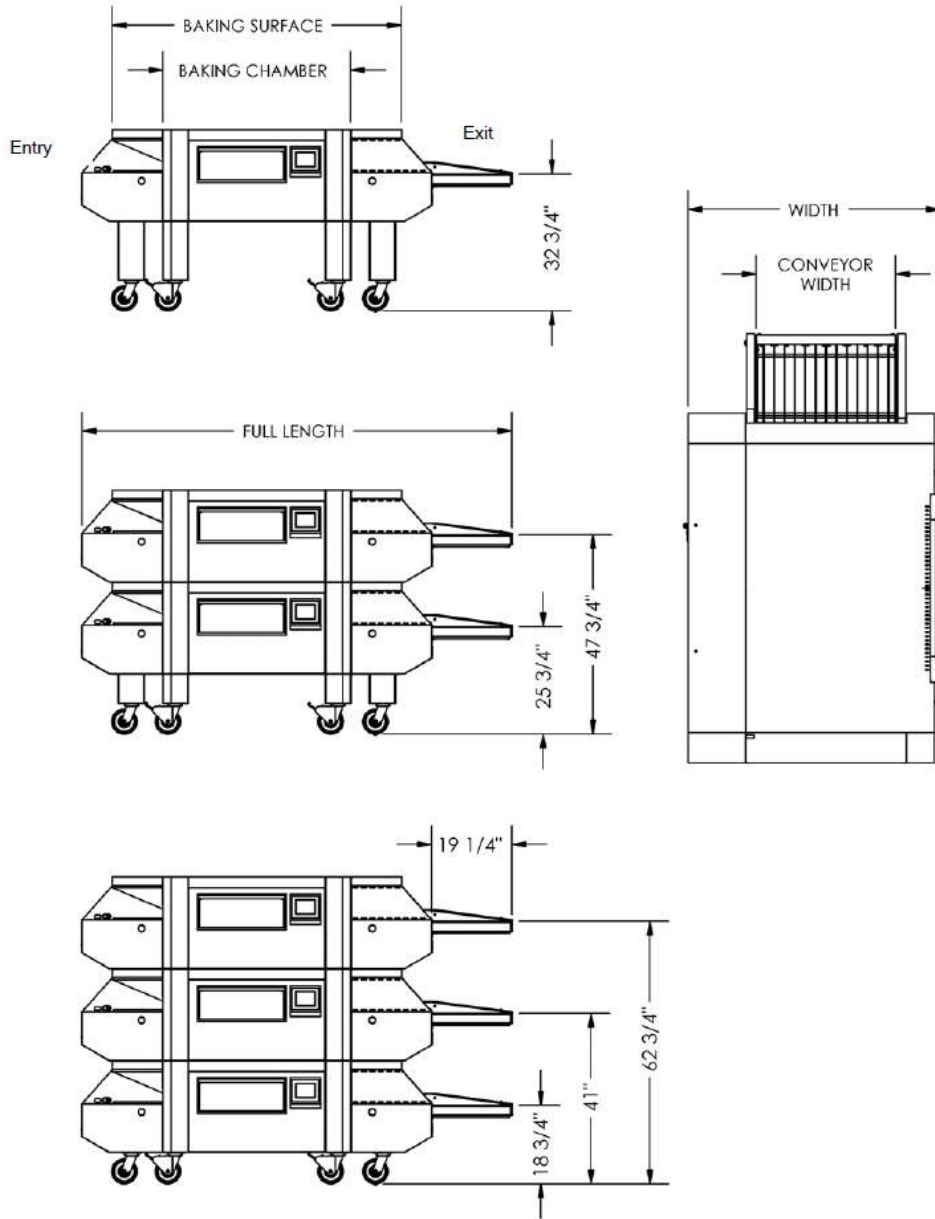

Model	Baking Surface	Conveyor Width	Full Length	Width
HR-70-22	70"	22"	102 3/4"	49 1/4"
HR-70-33	70"	33"	102 3/4"	60 1/4"
HR-93-22	93"	22"	126 3/4"	49 1/4"
HR-93-33	93"	33"	126 3/4"	60 1/4"

## **FOR YOUR SAFETY, READ BEFORE OPERATING**

**WARNING : Failure to follow these instructions carefully may result in a fire or explosion that may cause property damage, personal injury or death.**

1. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do **not** try to light the burner by hand.
2. BEFORE OPERATING, smell all around the appliance for gas. Be sure to smell close to the floor because some gases are heavier than air and will settle on the floor.



### **WHAT TO DO IF YOU SMELL GAS**

- Close immediately the manual main gas valve.
- Do not try to turn on any appliances.
- Do not touch any electric switch; do not use any phones in your building.
- Immediately contact your gas supplier using a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, contact the fire department.

**NOTE :** IF YOU HAVE TO RESTART THE APPLIANCE, YOU MUST WAIT 5 MINUTES IN ORDER TO CLEAR OUT ANY REMAINING GAS IN THE OVEN.


# TOUCHSCREEN CONTROL PANEL

## Main Display Screen Displays and Settings

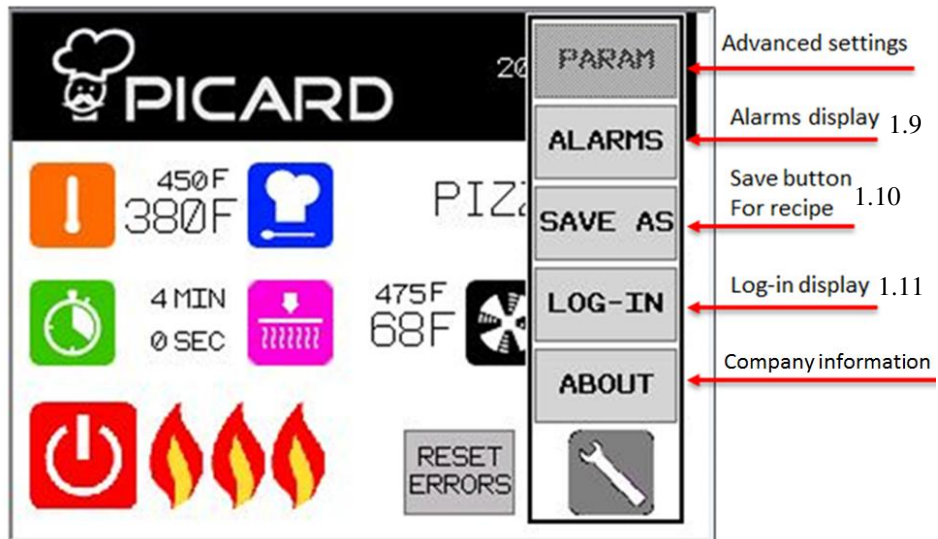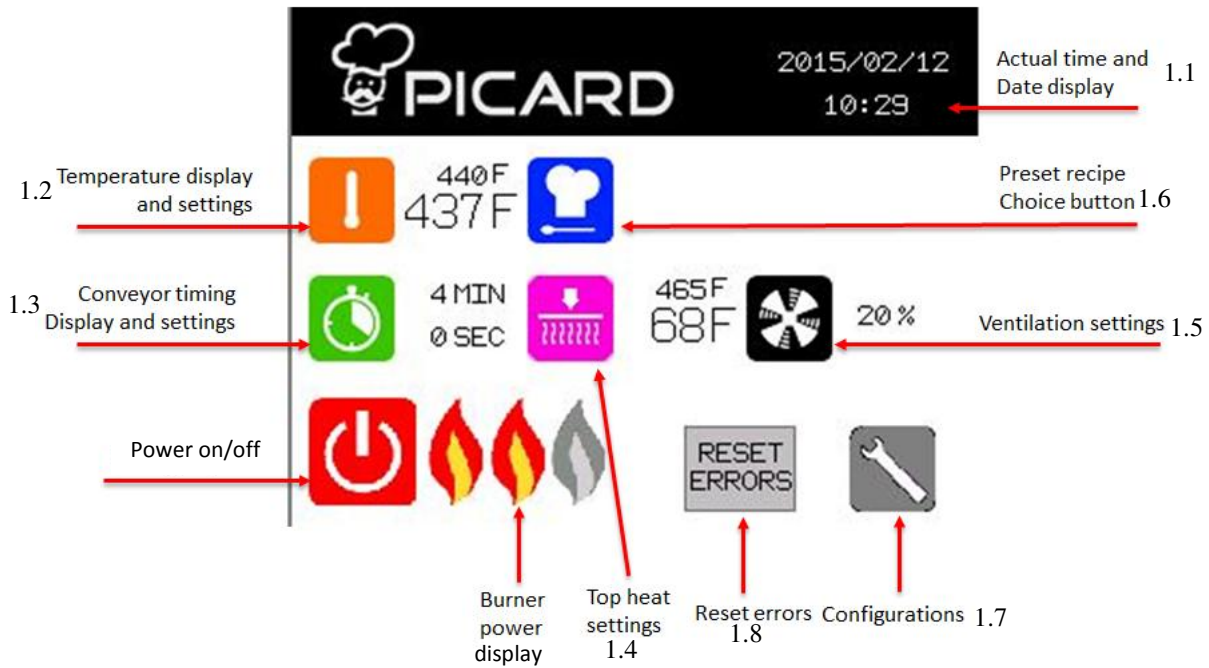

## 1.1.Setting the Date and Time

Touch on the date and time display (1.1).  
The date and time display screen will open.

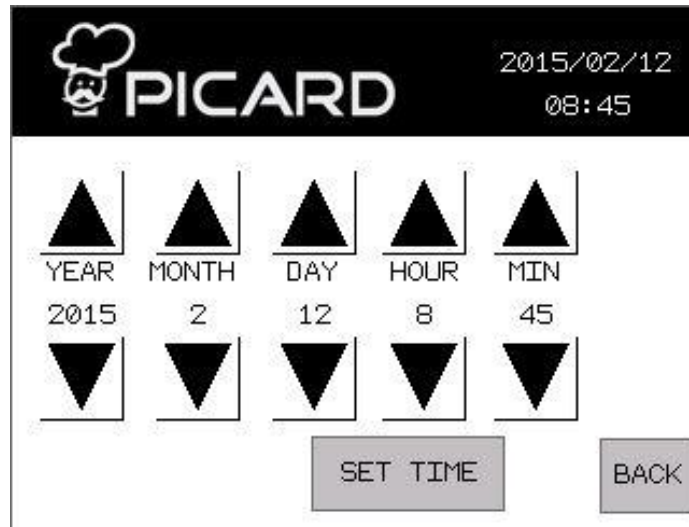

Set the date and time by pressing the arrow to change the information in the column you're updating.

Touch the set time button to save the change and return to the main display.

## 1.2.Setting the Temperature

Touch the temperature display area (1.2).


The baking temperature window will open.

Change the temperature by pressing the arrow or with the keyboard by pressing in the temperature (you can have access to this keyboard by pressing any number in any window).

Input the temperature you want to cook with and touch the baking temperature logo.

The set temperature will appear at the right of the logo.

Once the oven is started the actual temperature in the baking chamber will be displayed under your desired temperature.

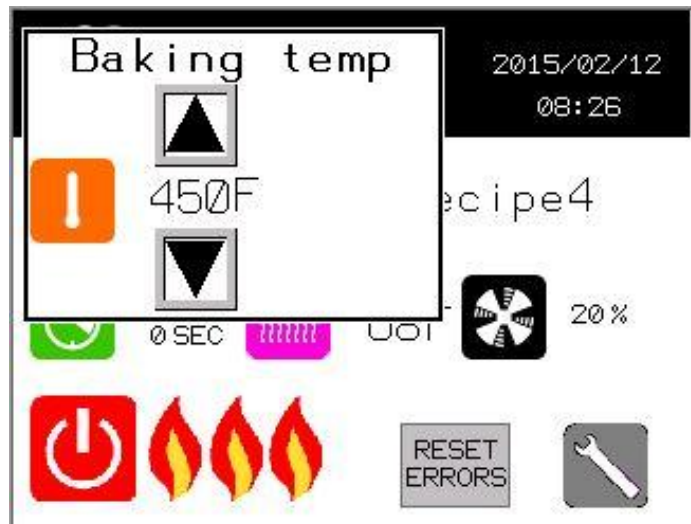


The keyboard display



### 1.3. Setting the Conveyor Time

From the main display screen.  
Touch the timer symbol (1.3).

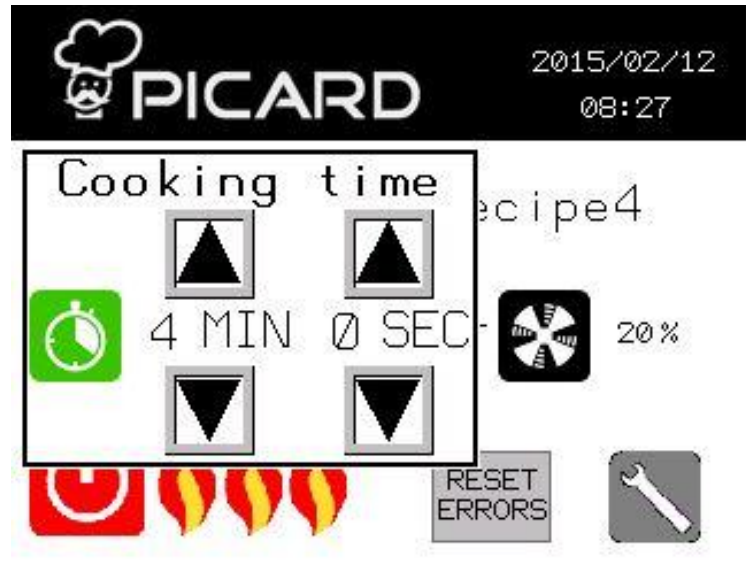

The cooking time display will open.  
Enter the time from, 1 to 15 minutes, using the arrow.  
Touch the logo to save your configuration.

### 1.4. Setting Top Heat


Top heat is the same as the baking temperature.  
To configure top heat, touch the top heat symbol (1.4) on the main display screen as shown below.



The top temperature display will open.  
Change the temperature by pressing the arrow.  
Enter the desired setting followed by touching the logo to save the settings.

## **1.5.Ventilation Configuration**

The systems air circulation system can be configured by touching the fan symbol (1.5).  
The fan speed display will appear.  
Change the setting by pressing the arrow.  
Enter the desired setting followed by pressing the fan speed logo to save the settings.

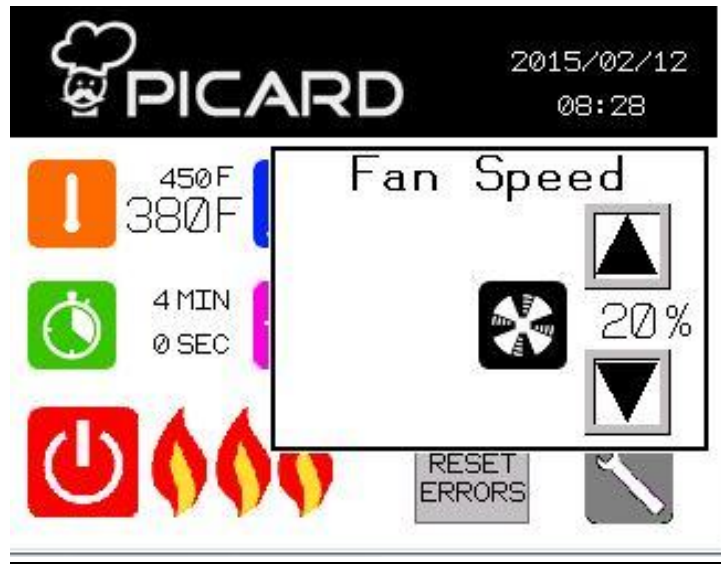


## **1.6.Setting the Recipe Configuration**

The Hot Rock Stone Conveyor oven allows you to pre program ten recipes.  
To configure recipes:


From the main display screen, touch the configurations icon (1.7).  
The Configurations screen will open.  
Touch the Log-in button (1.11).  
You have to be logged-in with your user to create or edit recipe.



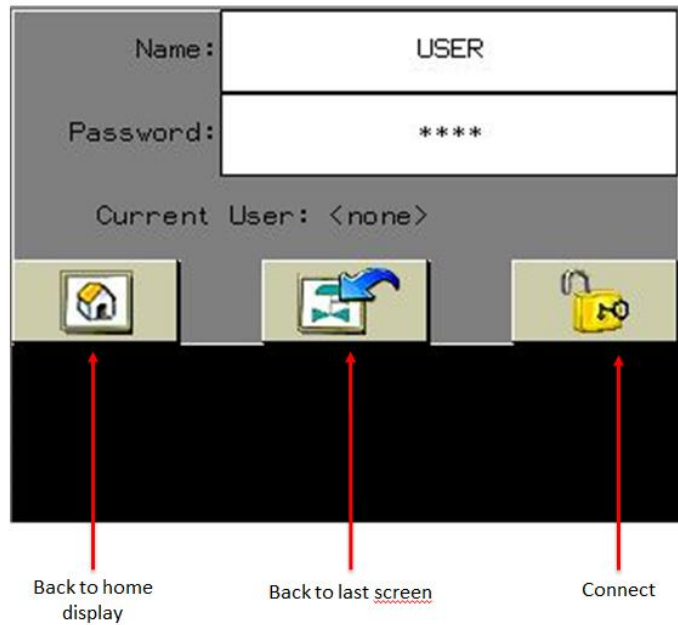

Username: user  
 Password: user

Once you're connected, select the Recipe you want to configure.  
 Used Recipes buttons (1.6) will display the recipe name under the Recipe buttons.  
 Press load to load the Recipe.

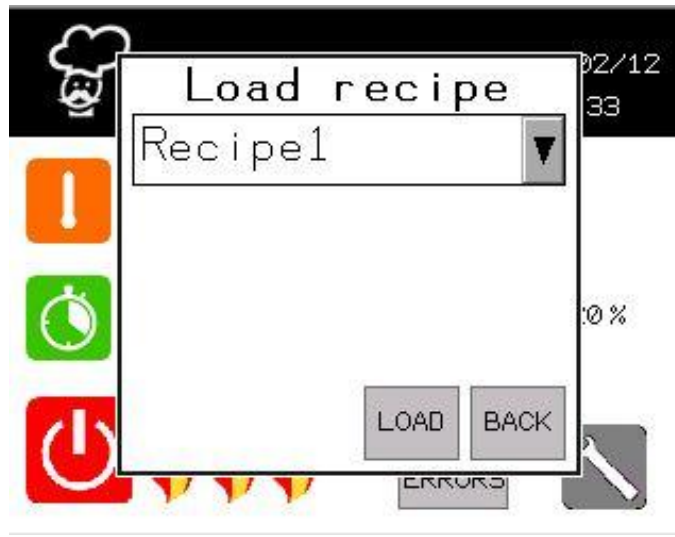


After you've load your Recipe, you can edit the name by pressing the name of the Recipe in the main display. If the name you've entered turn red like in the picture, It's because you used to many characters.



You can enter your parameter for the Recipe on the main display.




When your Recipe is complete you have to save it.  
 Open the configuration menu (1.7).  
 Press save as (1.10).  
 Choose the Recipe slot you want to save your recipe.  
 Press save.

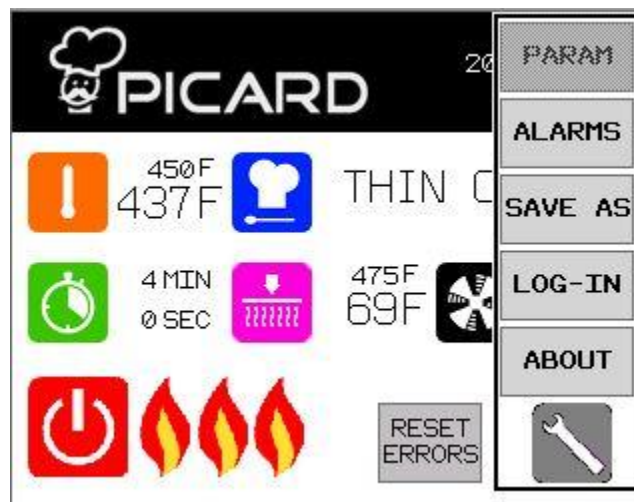



## 1.9.ALARMS

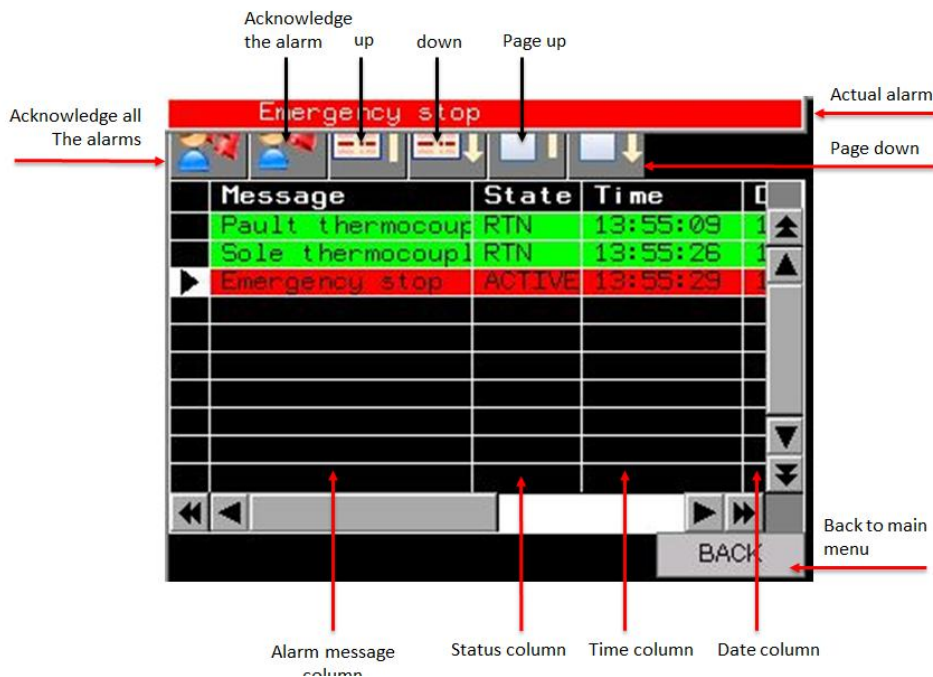

You can have access to this alarm display by pressing the alarm button (1.9) in the configuration menu (1.7). This display shows you all the alarms that you got while you were running your oven. The colors of the alarm mean something. If you have a green alarm that means that the alarms is not effective. If you have a yellow alarm, that means you have acknowledged an error but, it's still active. A red alarm means that you have an error somewhere.


To turn the alarm green, you can acknowledge them or press reset alarm (1.8) in the main display.

## MAINTENANCE SCHEDULE

<b>IT IS VERY IMPORTANT TO DISCONNECT THE POWER SUPPLY BEFORE SERVICING AND MAINTENANCE</b>	<b>EVERY DAY</b>	<b>EVERY 6 MONTHS</b>	<b>ONCE A YEAR</b>	<b>TO BE CARRIED OUT BY</b>
Add high temperature grease to all pillow block and flange bearings		*		Distributor / Certified technician Customer
Add high temperature grease to all drive chain		*		
Lubricating the chain with **dry graphite food grade lubricant based oil** (See page : 23)		*		Distributor / Certified technician Customer
Clean up the granite stone. (See page : 23)	*			Customer
Replace the ignition cable.			*	Distributor / Certified technician
Clean up the fan of the motor.			*	Distributor / Certified technician
Clean up the windows and the oven in general.	*			Customer
To tighten the chains			*	Distributor / Certified technician
Clean up the seed drawer.	*			Customer

\*\* WE RECOMMEND PETROCHEM FOODSAFE PETRO-SYN FG-220 (GRANGER NO. 3NLK1) OVEN CHAIN LUBRICANTE

## MAINTENANCE

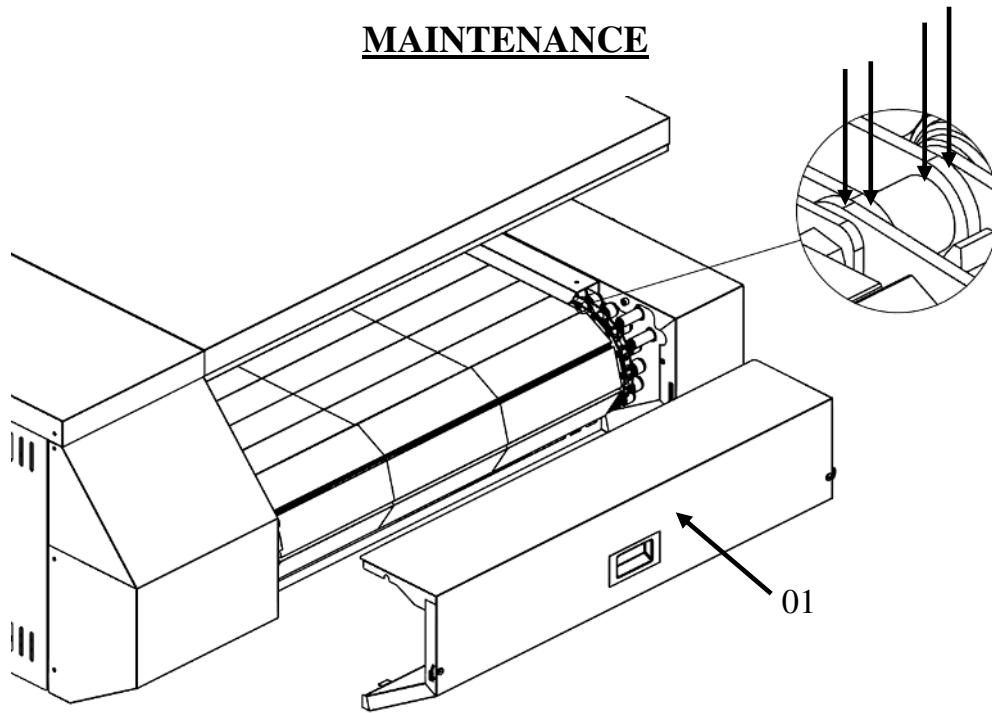

### LUBRICATING THE CHAIN FOR STONE

1. Make sure the inside temperature of oven is lower than 122 °F or 50 °C.
2. Remove the apron (01) to access the chains.
3. Turn ON the stone conveyor to its maximum speed.
4. Use dry graphite food grade lubricant on its entire length at the 4 places indicated by the arrows on the drawing above.

### CLEANING UP THE STONE CONVEYOR


1. Lower the oven internal temperature to 150 °F or 66 °C.
2. Remove the apron (01).
3. Turn ON the stone conveyor to its maximum speed.
4. Clean up the stones with one of the scrapers sent with the oven. Afterwards, clean it up again with a rag and warm water.

#### WARNING

**Do NOT clean up a hot stone with cold water or it could crack.**


### CLEANING UP THE EXIT AND/OR ENTRY CONVEYOR

1. Turn OFF the main burners' ignition switch.
2. Clean up the wire belt with a rag and warm water. To ease the cleaning process, pull the wire belt upwards. Start by remove the pick seed sheet metal (02). After that pull the knob (03) to disengage the wire belt, then you only have to pull the wire belt (04) upwards.

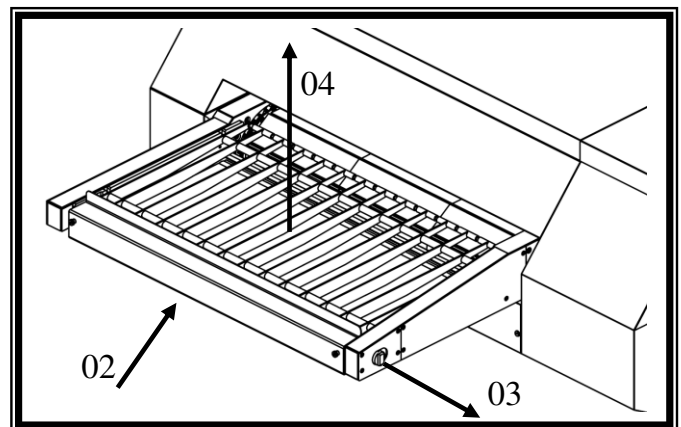


## Pre-drying the oven

To minimize warpage and maximize the size of the stones, pre-dry the plates in the oven. *Keep the oven door closed throughout the pre-drying process!*

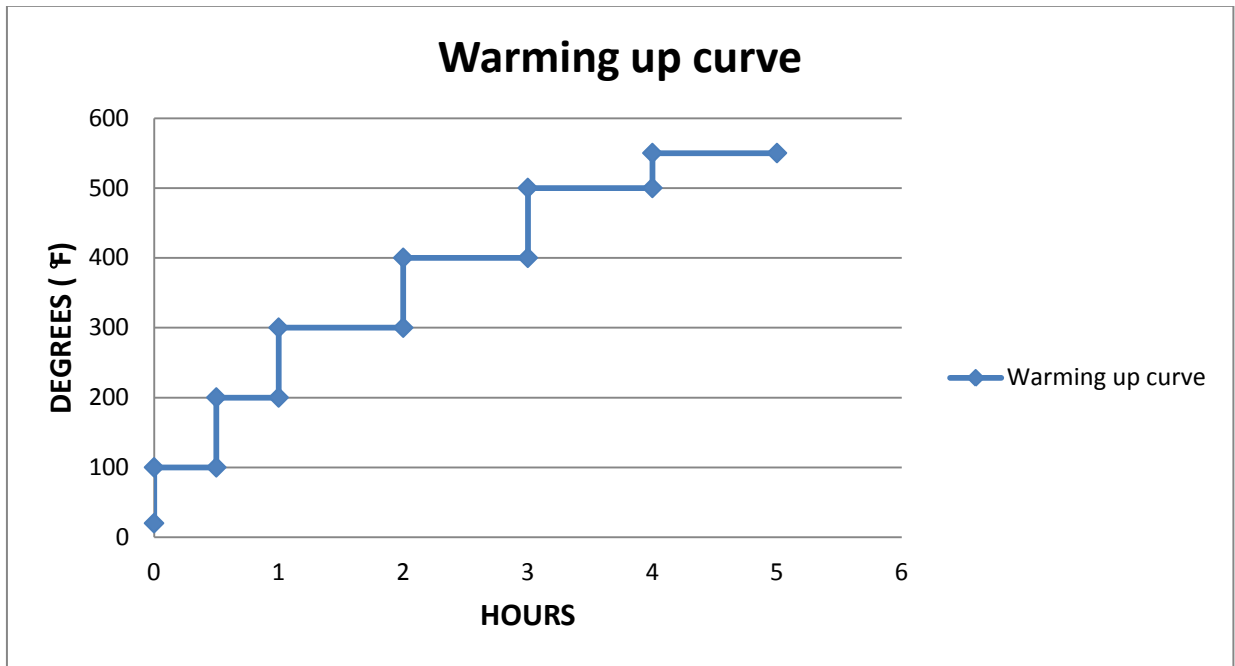


# ELECTRICAL DIAGRAM

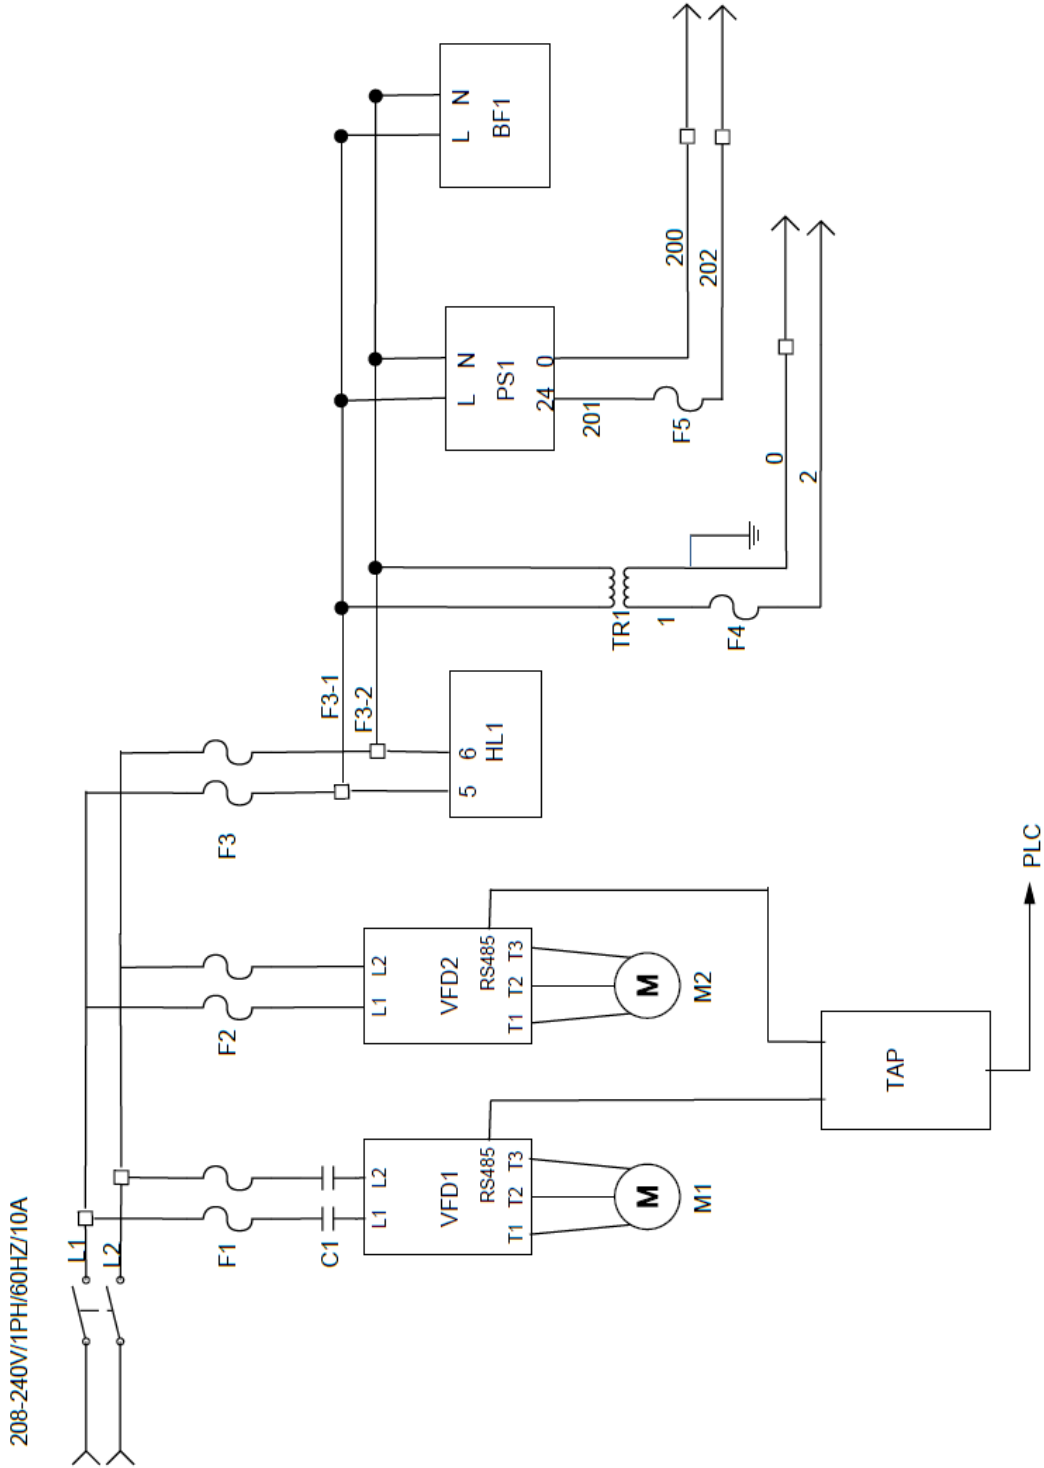

TUNNEL OVEN HOTROCK HR-70-33  
 HR70600 R00  
 22-12-2014  
 PAGE 1 OF 4

## ELECTRICAL DIAGRAM DIAGRAMME ÉLECTRIQUE



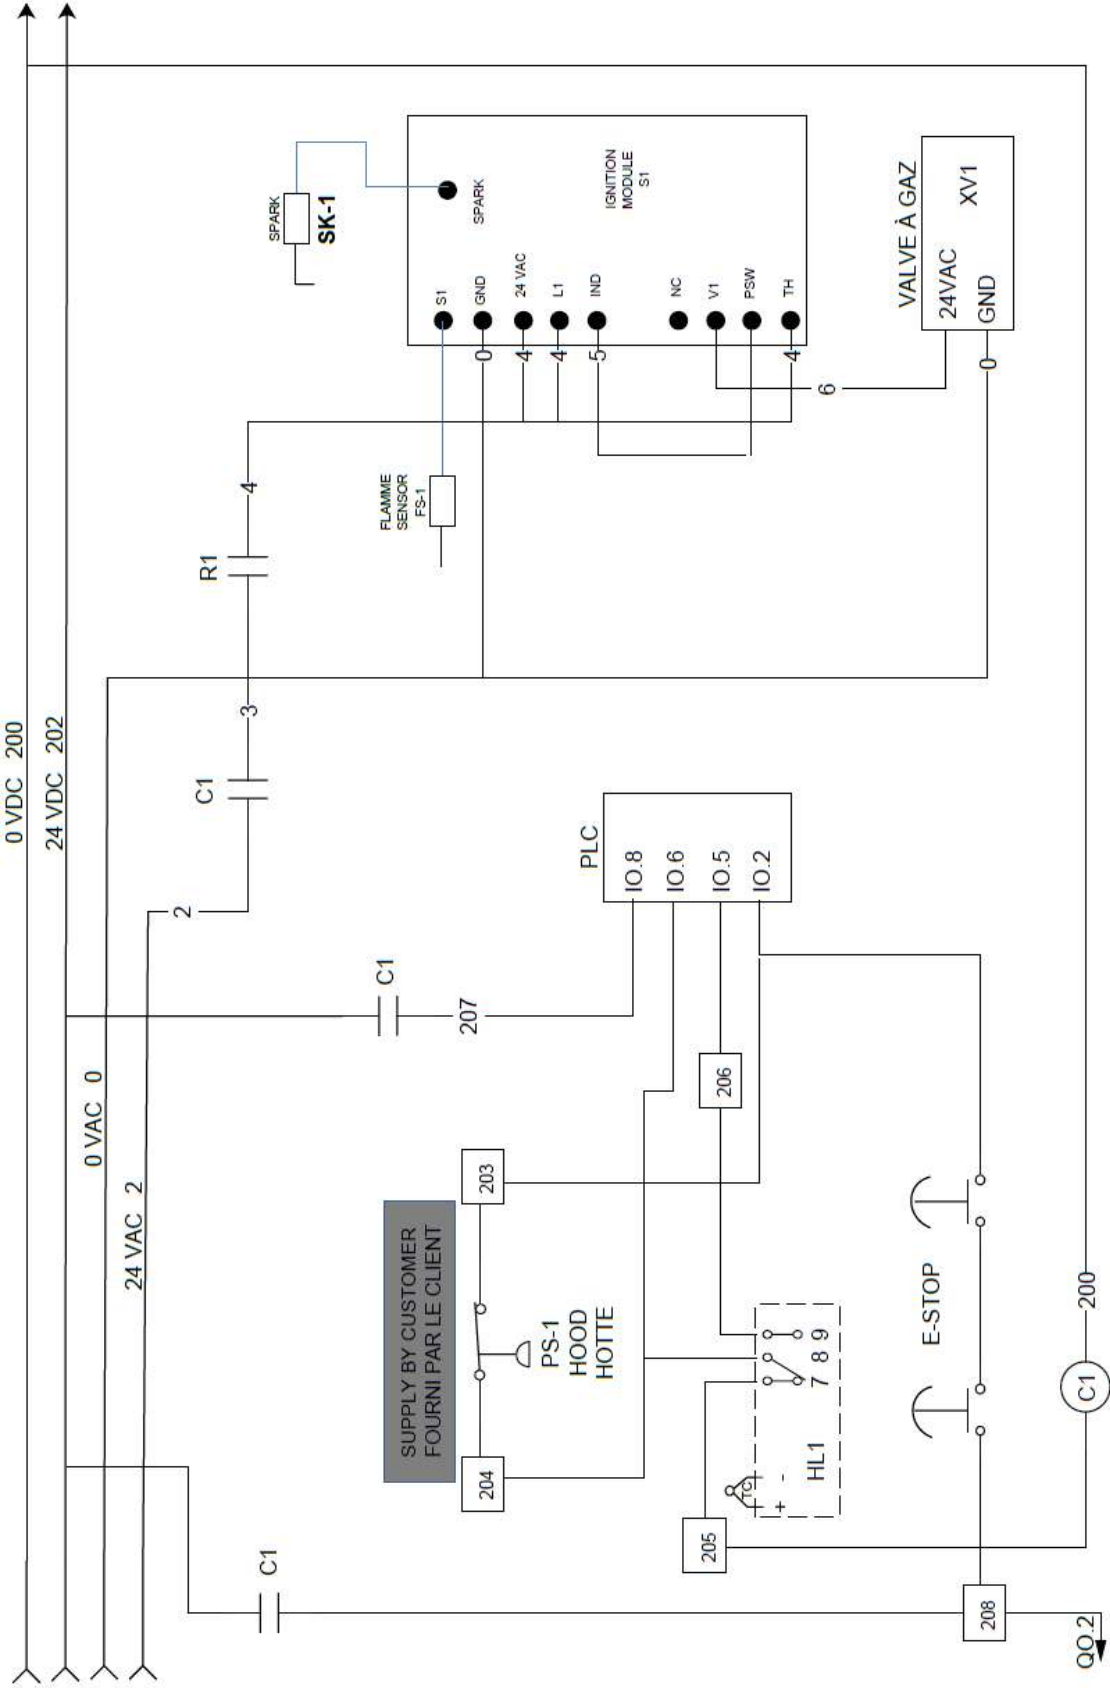

# ELECTRICAL DIAGRAM DIAGRAMME ÉLECTRIQUE


TUNNEL OVEN HOTROCK HR-70-33

HR70600 R00

22-12-2014

PAGE 2 OF 4



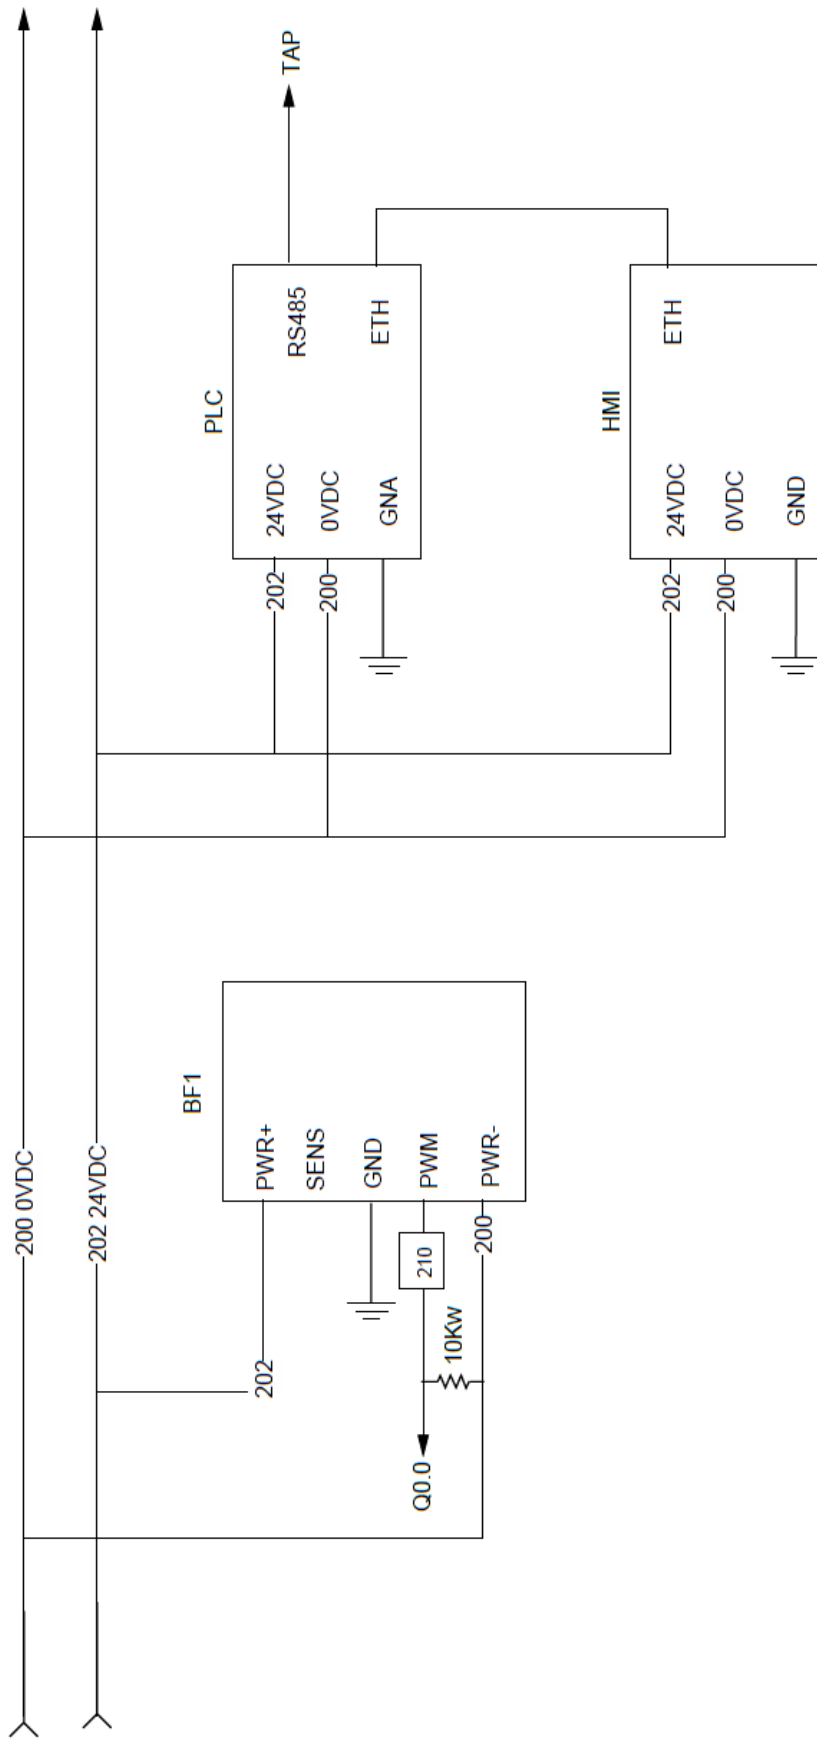


# ELECTRICAL DIAGRAM DIAGRAMME ÉLECTRIQUE

TUNNEL OVEN HOTROCK HR-70-33

HR70600 R00

22-12-2014

PAGE 3 OF 4

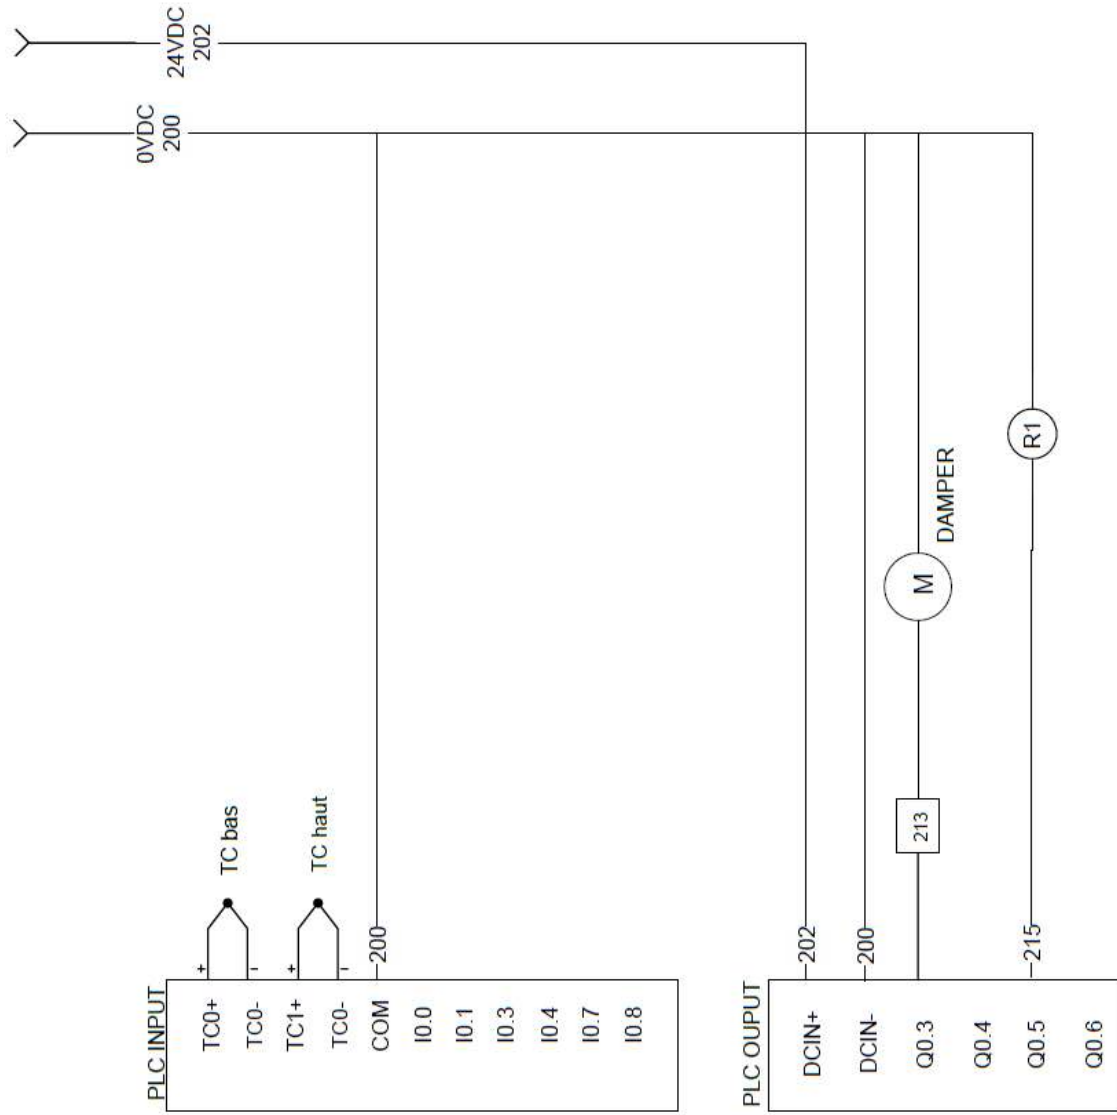

# ELECTRICAL DIAGRAM DIAGRAMME ÉLECTRIQUE

TUNNEL OVEN HOTROCK HR-70-33

HR70600 R00

22-12-2014

PAGE 4 OF 4



## USA & Canada Sales Conditions and Limited Warranty

Picard Ovens, inc. warrants its equipment to be free from defect in material and factory workmanship under normal use for (1) one year from the date of the original Installation at the end client location to the original client. All warranty service must be pre-approved by Picard Ovens and have service authorization number prior to the execution of any services. Please contact our service department at 1 819-758-1883 or toll free at 1 800-668-1883. Our business hours are 8 a.m. to 5 p.m. Monday through Friday, Eastern time zone. If calling during non business hours, follow the recorded instructions for emergency service and someone will promptly contact you.

### Client Responsibilities:

All necessary utilities must be installed to code by a licensed contractor and ready at start up. The client must inspect the equipment and crates at their delivery. Damage during transportation must be reported directly to the transportation company and to Picard Ovens. When installation of Picard equipment is made by an authorized dealer or any other person than one of Picard' employees, even in the presence of a Picard supervisor, the dealer or person installing shall be the only person responsible of any faulty installation of the equipment, no warranty being given by Picard on an installation performed by any person other than one of Picard's own employees. No labor warranty applies in such cases.

All Installations must be made by authorized service technicians and in accordance to the instructions furnished with the unit. The client must supply proof of the installation and the initial startup by filling out the forms furnished at the back of the owners users guide, dually signed by both the client and the service technician as witness that all required steps and verifications were successfully carried out and the installation is acceptable to the client. The form may be faxed or mailed to Picard Ovens at the coordinates found at the bottom of the page.

Proper maintenance procedures are found in the operators guide.

### Precisions and limitations of liability:

This warranty is conditioned upon the following terms:

- The successful registration of the installation and start up forms.
- Terms of payment have been met.
- The equipment has not been accidentally or intentionally damaged, altered, misused or abused.
- Warranty coverage is at the sole discretion and is the exclusive right of Picard Ovens.
- Warranty replacement parts will be sent out under the authority of Picard Ovens, prepaid freight, expedited in the most rapid manner possible. It is the responsibility of the client to return all defective parts to the factory prepaid for proper warranty credit to be reimbursed.

In the event of warranty claim or otherwise, the sole obligation of Picard Ovens shall be to repair and / or to replace equipment or equipment components, at their own discretion. Such repair or replacement shall be at the expense of Picard Ovens with the exception of travel over 160 miles or two hours, overtime and holiday charges which shall be at the clients expense. Any repairs or replacement of equipment or its parts, under this warranty does not constitute an extension of the original warranty for any period. Parts to be replaced under this warranty will be repaired or replaced with new or functionally operative parts at the option of Picard Ovens.

Picard Ovens liability on any claim of any kind, including claims based on warranty, expressed or implied, contract, negligence, strict liability or any other theories shall be solely and exclusively the repair or replacement of the product as stated herein, and such liability shall not include, and purchaser specifically renounces any rights to recover, special, incidental, consequential or other damages of any kind whatsoever, including, but not limited to, injuries to persons or damage to property, loss of profits or anticipated profits, or loss of use of the product.

Damages are limited to the original purchase price.

Warranty labor charges will be calculated and paid using reasonable normal business hours and rates. This is to say Picard will pay 8 hours labor at a regular (Monday through Friday 8a.m. to 5 p.m.) hourly rate and within a 160 mile distance. Any overtime or excess travel charges will be the client's responsibility.

2013 Picard warranty\_v1.01

Picard Ovens, Inc.  
1325 Notre-Dame Est  
Victoriaville, Qc. G6P 4B8  
[www.picardovens.com](http://www.picardovens.com)  
[info@picardovens.com](mailto:info@picardovens.com)

July 15, 2013



## USA & Canada Sales Conditions and Limited Warranty

### Exclusions:

Any damage incurred during transportation.

Use of any high pressure cleaning equipment will void this warranty.

Normal cleaning and maintenance functions: including lubrication or greasing.

Parts that would normally wear or need replacement under normal use (example: light bulbs, fuses, thermo-couples, belts and filters).

### In the event that:

There is failure or malfunction of the equipment or any of its components caused by abnormal or improper use or the failure is otherwise not attributable to a material or manufacture defect.

Any failure caused by improper use, including but not limited to improper shelf loading.

The equipment has been altered from its original factory condition.

The rating plate has been removed, altered or obliterated.

The equipment has been improperly maintained, proper maintenance is the responsibility of the client.

Any parts that become defective because of utility services (power surges, high or low voltages, high or low gas pressure of volume, contaminated fuel or improper utility connections).

This warranty shall not apply if the equipment or any part is damaged as a result of accident, casualty, alteration, misuse, abuse, improper cleaning, improper installation, improper operation (including improper tray loading resulting in shelf jams, natural or manmade disasters). In no event shall Picard Ovens be held liable for direct, incidental or consequential damages arising out of or resulting from the operation of this equipment.

Picard assumes no liability for any contingent or consequential damages incurred by the client, including but not limited to down time, loss of business, damage or product loss.

In the event that the client denies access to an authorized technician (whom has been scheduled to make a service call) upon their arrival, releases Picard Ovens from of any and all warranted obligations and all expenses incurred are the sole responsibility of the client.

Note: Oven facades, windows, light bulbs, granite or baking stones are not covered under this warranty.

In case of any litigation or claim whatsoever regarding this Limited Warranty, the only competent courts shall be the ones of the judicial district of Athabasca, province of Quebec, Canada. This Limited Warranty and all sales agreements for the equipment shall be construed, interpreted and executed in accordance with the laws in force in the province of Quebec, Canada.

### Handling claims:

As soon as a defect is discovered, Picard Ovens must be notified. Our service manager will arrange for an authorized service agent to make the necessary repairs.

### Call or email:

Telephone: 819-758-1883

Toll Free: 800-668-1883

Fax: 819-758-1465

Email: [info@picardovens.com](mailto:info@picardovens.com)

**A**

**P**

**P**

**E**

**N**

**D**

**I**

**X**