

How to replace the E-stop wiring (HR11-0145-A)





Step 1

Unplug the electrical connection. Make sure that the oven is not powered, also disconnect the gas supply.

This is for your safety.

Take off the side panels.



You will be able to do so after moving the oven off the wall.


To remove them you have to turn the latches by turning them a quarter of the way counterclockwise or by removing the screws depending on the oven's panel type.



Step 2

Find the estop wires.

They are placed around the middle of the oven

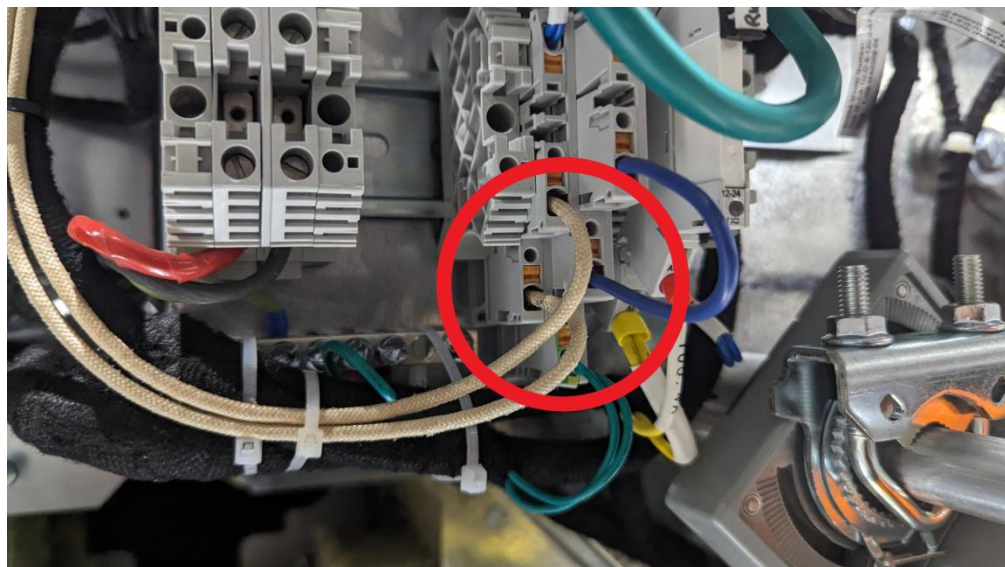

Those are the wires you will need to replace

To remove them you will have to push the Release button which is the orange square with a notch



Step 3

Open the front door .

In the top you will see two bolts
They hold the front panel.



You will have to remove them.

Step 4


Once you removed the front panel you can take off the bolts holding the corners.

They are the ones at the top and bottom.

The other bolts that are highlighted are holding the column in place.




Step 5

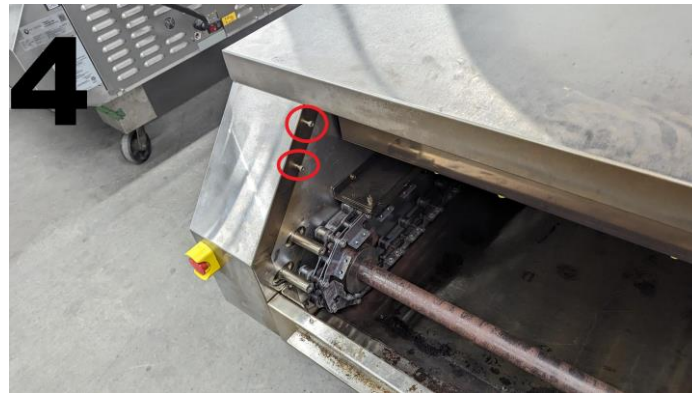

To remove the corners you will have to:

- 1-Remove the crumb trays
- 2-Remove the bottom hoods by lifting them up (Note that there are two bolts holding them in place, once you slide it up you can then angle it towards you and pull it off)
- 3,4-Take off the bolts that are marked
- 5- Wiggle off the side corners

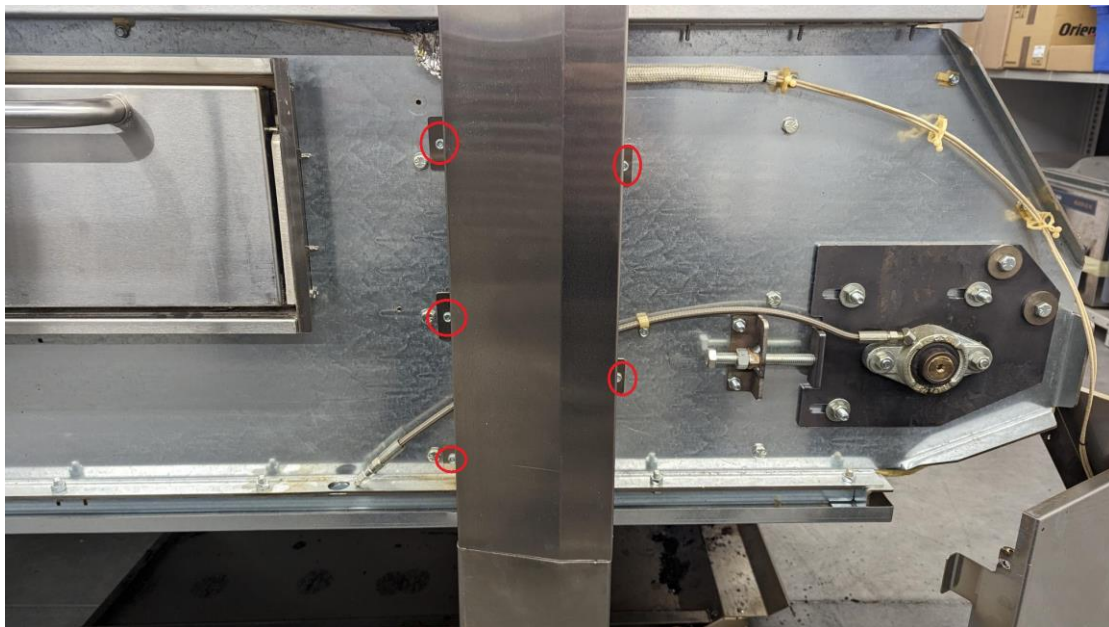

Step 6

Now that the corners are off you can remove the column by unscrewing the bolts holding it.

You can free the wires from the E-stops.



Step 7

Now to replace the wires you will have to push the Release button which is the orange square with a notch

Now that its freed make sure that no tie wraps hold said wires

Attach the old wires with the new ones and pull the old ones through the roof from the other side of the oven

You can then reattach the new wires where the old ones were and do the steps backward to close the oven

